



Original	Replacement
Standby	Power
Sub-T	Subtitle / EQ
TTX	Text / Goto
Mute	Mute / Dimmer
EPG	Guide / EPG / -/--
GOTO	Shift + Text /
Page +	CH+ / Page+
Audio	Audio / Lang I/II
Repeat	Shift + 0
Page -	CH- / Page-
Menu	Menu / Home
Up / CH +	Up
Up / CH +	Shift + Up
Exit	Exit / Cancel / Clear
Left / Vol -	Shift + Left
Left / Vol -	Left
OK	OK

Original	Replacement
Right / Vol +	Shift + Right
Right / Vol +	Right
FAV	Fav / Marker / PC
Down / CH -	Shift + Down
Down / CH -	Down
TV / Radio	TV/Radio /
1	1
2	2
3	3
Recall	Back / Return
4	4
5	5
6	6
Info	Info / Angle
7	7
8	8
9	9



 

 

 







 







 













 

 



 



 





 

 



 

 

 









Original		Replacement	
	0		0
	<< Rev		<< / Tune-
	>> Fwd		>> / Tune+
	I<< Prev		I<< / Preset-
	>>I Next		>>I / Preset+
	Play		Play / Slow
	Pause / Timeshift		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Red / PVR		Red / Netflix / Search
	Green / V-Format		Shift + Green / APP / Repeat
	Green / V-Format		Green / APP / Repeat
	Yellow / Aspect		Shift + Yellow / YouTube / Repeat
	Yellow / Aspect		Yellow / YouTube / Repeat
	Blue / Timer		Blue / Prime Video / Random
	Blue / Timer		Shift + Blue / Prime

Original		Replacement	

 

 

 



 

 



 
 
 
 
 


 


 
 
 

 
 




	Original	Replacement		Original	Replacement
	Power	 Power		Vol+	 Vol+
	SUB-T	 Subtitle / EQ		FAV	 Fav / Marker / PC
	TTX	 Text / Goto		Down/CH-	 Down
	Mute	 Mute / Dimmer		Tv/Radio	 TV/Radio /
	EPG	 Guide / EPG / -/--		1	 1
	Goto	 Shift + Text /		2	 2
	Page+	 CH+ / Page+		3	 3
	Lang	 Audio / Lang I/II		Recall	 Back / Return
	Repeat	 Shift + Green / APP /		4	 4
	Page-	 CH- / Page-		5	 5
	Menu	 Menu / Home		6	 6
	Up/CH+	 Up		Info	 Info / Angle
	Exit	 Exit / Cancel / Clear		7	 7
	Left	 Left		8	 8
	Vol-	 Vol-		9	 9
	OK	 OK		0	 0
	Right	 Right		<<	 << / Tune-





Original	Replacement
 >>	 >> / Tune+
  <<	  << / Preset-
 >>	 >>  / Preset+
 Play	 Play / Slow
 Pause/Timeshift	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 PVR	 Setup / OPT /
 Green	 Green / APP / Repeat
 V-Format	 Picture / Format
 Yellow	 Yellow / YouTube / Repeat
 Aspect	 AV / Input / RDS
 Blue	 Blue / Prime Video / Random
 Timer	 Sleep / Timer

Original	Replacement

