







| Original | Replacement |
|--|---|
|  Standby |  Power |
|  Mute |  Mute / Dimmer |
|  Play |  Play / Slow |
|  Pause |  Pause / Step / Freeze |
|  Stop |  Stop / Hold |
|  Rec |  Rec / Rec Mode |
|  <<< |  <<< / Tune- |
|  >>> |  >>> / Tune+ |
|  I<<< |  I<<< / Preset- |
|  >>I |  >>I / Preset+ |
|  S.Mode |  Sound / Title |
|  Audio/Tv/Radio |  Audio / Lang I/II |
|  Subtitle |  Subtitle / EQ |
|  Eject/Auto |  Eject / Surround |
|  P.Mode |  Picture / Format |
|  Zoom/Hold |  Zoom / Size |
|  Sleep |  Sleep / Timer |

| Original | Replacement |
|--|---|
|  D.Menu/Index |  D.Menu / Top |
|  Goto/Subpage |  Text / Goto |
|  Source |  AV / Input / RDS |
|  Menu |  Menu / Home |
|  Up |  Up |
|  Angle/Text |  Info / Angle |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Exit |  Exit / Cancel / Clear |
|  Down |  Down |
|  Recall |  Back / Return |
|  Vol+ |  Vol+ |
|  CH+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  Display |  Display / Media |
|  CH- |  CH- / Page- |





| Original | Replacement |
|------------------------|-----------------------------|
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| EPG | Guide / EPG / -/-- |
| 0 | 0 |
| FAV | Fav / Marker / PC |
| Red / Del / Prog | Red / Netflix / Search |
| Green / Rename | Green / APP / Repeat |
| Yellow / Move / Repeat | Yellow / YouTube / Repeat |
| Blue / Skip / A-B | Blue / Prime Video / Random |
| I>/Lang | Shift + >>1 / Preset+ |

| Original | Replacement |
|----------------|----------------------------|
| Nicam | Shift + Sound / Title |
| Audio/Tv/Radio | Shift + Audio / Lang I/II |
| Aspect | Shift + Picture / Format |
| Title/Size | Shift + Zoom / |
| D.Disp/Reveal | Shift + D.Menu / Top Menu |
| I>/Lang | Shift + Right |
| DVD Setup | Shift + 2 |
| FAV+ | Shift + 9 |
| -/-- | Shift + Guide / EPG / -/-- |
| FAV- | Shift + Fav / Marker / PC |

