



Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV / Input / RDS
	Up		Up
	P+		CH+ / Page+
	Right		Right
	Vol+		Vol+
	Left		Left
	Vol-		Vol-
	OK		OK
	Down		Down
	P-		CH- / Page-
	i		Info / Angle
	CL		D.Menu / Top
	Mute		Mute / Dimmer
	TXT		Text / Goto
	Red		Red / Netflix / Search
	Rec		Rec / Rec Mode
	Green		Green / APP / Repeat
	Timer		Sleep / Timer
	Yellow		Yellow / YouTube / Repeat
	Picture		Picture / Format
	Blue		Blue / Prime Video / Random
	Sound		Sound / Title
	(I)-		Shift + CH- / Page-





	Original	Replacement	Original	Replacement
	(I)+	SHIFT + CH PAGE		
	⚙️-	PRESET-		
	⚙️+	PRESET+		
	⏮	TUNE-		
	Play	SLOW		
	>>	TUNE+		
	Pause	STEP-FREEZE		
	Index + <<<	SHIFT + TUNE-		
	Index + >	SHIFT + TUNE+		
	Stop	HOLD		

