







































 


 
 







 



 
 














Original	Replacement	Original	Replacement
 Standby / On	 Power	 DVD Menu	 D.Menu / Top
 Mute	 Mute / Dimmer	 System Setup	 Setup / OPT /
 Play	 Play / Slow	 Test Tone	 Text / Goto
 Pause	 Pause / Step / Freeze	 Auto	 AV / Input / RDS
 Stop	 Stop / Hold	 DVD Setup	 Menu / Home
 << / <I / <II	 << / Tune-	 Up / Tune +	 Up
 >> / II> / I>	 >> / Tune+	 DVD Angle	 Info / Angle
 I<<	 I<< / Preset-	 Left / ST -	 Left
 >>I	 >>I / Preset+	 Enter	 OK
 Sound Mode	 Sound / Title	 Right / ST +	 Right
 DVD Audio	 Audio / Lang I/II	 Clear	 Exit / Cancel / Clear
 DVD Subtitle	 Subtitle / EQ	 Down / Tune -	 Down
 Surround	 Eject / Surround	 Return	 Back / Return
 Quiet / Midnight	 Picture / Format	 Volume +	 Vol+
 DVD Zoom	 Zoom / Size	 System Disp	 Smart / List
 Timer	 Sleep / Timer	 Folder +	 CH+ / Page+
 Program	 TV/Radio /	 Volume -	 Vol-

Program





Original	Replacement
DVD DISP 8	MEDIA DISPLAY Display / Media
FOLDER -	CH PAGE CH- / Page-
PROGRAM 1	TV 1
REPEAT 2	DVD 2
RANDOM 3	CD - STB 3
TEST TONE 4	VIDEO 4
CH LEVEL 5	TAPE 5
TIMER 6	TUNER 6
7	AUX - HDD 7
DVD DISP 8	USB 8
DIMMER 9	BLUETOOTH 9
CH LEVEL 5	GUIDE EPG Guide / EPG / -/--
0	HDMI - SAT 0
ENTER	PC FAV MARKER Fav / Marker / PC
ROOM SETUP	NETFLIX SEARCH Red / Netflix / Search
REPEAT 2	APP REPEAT Green / APP / Repeat
ADVANCED	YouTube REPEAT A-B Yellow / YouTube / Repeat

Original	Replacement
RANDOM 3	Blue / Prime Video / Random
TV Power	SHIFT + Power
Dimmer 9	SHIFT + DIMMER MUTE Shift + Mute / Dimmer
BASS MODE	SHIFT + SOUND Shift + Sound / Title
TOP MENU	SHIFT + TOP MENU D.MENU Shift + D.Menu / Top Menu
TV Input	SHIFT + RDS AV INPUT Shift + AV / Input / RDS
TV Volume +	SHIFT + VOL+ Shift + Vol+
TV Channel +	SHIFT + CH PAGE+ Shift + CH+ /
TV Volume -	SHIFT + VOL- Shift + Vol-
TV Channel -	SHIFT + CH PAGE- Shift + CH- /
TV	SHIFT + TV 1 Shift + 1
DVD / CD	SHIFT + DVD 2 Shift + 2
Line L1 / L2	SHIFT + CD - STB 3 Shift + 3
FM / AM	SHIFT + TUNER 6 Shift + 6

