









 

 

 

 




















Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Info	 Info / Angle
 0	 0
 Recall	 Back / Return
 PMode	 Picture / Format
 I / II	 Audio / Lang I/II
 EPG	 Guide / EPG / -/--

Original	Replacement
 Sleep	 Sleep / Timer
 Input	 AV / Input / RDS
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 FAV	 Fav / Marker / PC
 Vol +	 Vol+
 ADD / DEL	 Shift + Back / Return
 PR +	 CH+ / Page+
 Vol -	 Vol-
 Cancel	 Shift + Exit / Cancel / Clear
 PR -	 CH- / Page-
 Red	 Red / Netflix / Search





Original	Replacement	Original	Replacement
 Green	 Green / APP / Repeat	 Subpage / Rec	 Rec / Rec Mode
 Yellow	 Yellow / YouTube / Repeat	 Index / List	 Smart / List
 Blue	 Blue / Prime Video / Random		
 Play / Pause	 Play / Slow		
 Play / Pause	 Shift + Play /		
 Stop	 Stop / Hold		
 Setup	 Setup / OPT /		
 Eject	 Eject / Surround		
 I<< / Text	 Shift + I<< / Preset-		
 I<< / Text	 I<< / Preset-		
 <<	 << / Tune-		
 Size	 Zoom / Size		
 S. Title M.	 Sound / Title		
 >>I / Hold	 >>I / Preset+		
 >>I / Hold	 Shift + >>I / Preset+		
 >> / Reveal	 >> / Tune+		
 Subpage / Rec	 Shift + Rec / Rec Mode		

