 


 
 


 


 


 
 

 

 
 
 




 



 
 
 
 

 






Original	Replacement
 Power	 Power
 Volume Up	 Vol +
 Volume Down	 Vol -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 Disc Direct Play 1	 Shift + 1
 Disc Direct Play 2	 Shift + 2
 Disc Direct Play 3	 Shift + 3

Original	Replacement
 Disc Direct Play 4	 Shift + 4
 Disc Direct Play 5	 Shift + 5
 Disc Direct Play 6	 Shift + 6
 Disc Direct Play 7	 Shift + 7
 Open/Close	 Eject
 Karaoke	 Media
 CD	 Yellow
 Video/AUX	 Red
 Tuner/Band	 Green
 Tape Deck 1/2	 Blue
 Play/Direction/Pre set <>	 Play
 Stop	 Stop
 Pause	 Pause
 Rec/Rec Mute	 Rec
 << Tuning	 <<
 I<< Down	 I<<
 Tuning >>	 >>





Original	Replacement	Original	Replacement
UP >> I	>> I		
Set	Menu		
Clear	Exit		
GEQ	Smart		
T.Bass	Dual		
PRGM	Shift + Sleep		
Random	TV/R		
Edit/Check	Info		
Repeat/Mono	Text		
Sleep	Sleep		
Timer	AV		
Clock	Options		

