
 

 

 








 
 



 
 
 

 







Original	Replacement	Original	Replacement
 Power	 Power	 Hold / Guide	 Guide
 Mute	 Mute	 Hold / Guide	 Shift + Stop
 1	 1	 Red	 Red
 2	 2	 Green	 Green
 3	 3	 Yellow	 Yellow
 4	 4	 Blue	 Blue
 5	 5	 Vol +	 Vol +
 6	 6	 Vol -	 Vol -
 7	 7	 I - II	 Dual
 8	 8	 Source	 AV
 9	 9	 Freeze	 Shift + Pause
 0	 0	 CH +	 Ch +
 Text	 Text	 CH -	 Ch -
 Recall / S.Page	 Back	 Sleep	 Sleep
 Index / PVR List	 Smart	 Menu	 Menu
 Reveal / Rec	 Rec	 DTV / Radio	 TV/R
 Zoom / T.Shift	 Eject	 Exit	 Exit





Original	Replacement
 Aspect	 Format
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Media	 Media
 Info	 Info
 Subtitle	 Subt
 Play / Pause	 Play
 Play / Pause	 Pause
 I<<	 I<<
 >>I	 >>I
 Stop	 Stop
 <<	 <<

Original	Replacement
 >>	 >>
 Slow / FAV	 Pre Ch
 Repeat / Fav +	 Shift + Up
 Repeat / Fav +	 Shift + Text
 A-B / Fav -	 Shift + Down
 A-B / Fav -	 Shift + Back

