
 


 




 



 




 
 

 




 
 




 





 






 

 
 




 


 



 
 





 
 
 
 


Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Play	Menu Off	 Exit
Reveal	 Pause	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 +  Shift + Info	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement		Original	Replacement	
8		8	Mix Scan	 + 	Shift + TV/R
9		9	Tune-	 + 	Shift + Left
Guide -/-- 1.		Guide	Aft/Caf	 + 	Shift + Ok
0/10		0	Tune+	 + 	Shift + Right
2.Fav P/C 2.		Pre Ch	Bright- Sys	 + 	Shift + Exit
Red		Red	Contrast+	 + 	Shift + Ch +
Green		Green	Color- S.Std		<<
Yellow		Yellow	Contrast-	 + 	Shift + Ch -
Blue		Blue	3.*	 + 	Shift + Guide
Audio-	 + 	Shift + Play	4.# 16:9		Format
Audio+	 + 	Shift + Pause	Surround	 + 	Shift + Red
Tone-		I<<	Nicam/Mono	 + 	Shift + Green
Tone+	 + 	Shift + >>I	Level L	 + 	Shift + Yellow
On/Tim	 + 	Shift + Subt	Level R/Woofer	 + 	Shift + Blue
Off/Tim	 + 	Shift + Sleep			
Disp		List			
Color+ P.Std		>>			



Original	Replacement	Original	Replacement
On/Off	 Power	Menu Down	 Down
Mute	 Mute	Back	 Back
Reveal	 Pause	Volume+	 Vol +
Txt Stop	 Stop	Chan.Up	 Ch +
Info	 +  Shift + Info	Volume-	 Vol -
Subt.List	 Subt	Menu audio	 Dual
Sleep Timer	 Sleep	Chan.Down	 Ch -
Return TV	 TV/R	1	 1
Menu video	 D. Menu	2	 2
Text	 Text	3	 3
Txt Expand	 Eject	4	 4
Menu	 Menu	5	 5
Menu Up	 Up	6	 6
Display	 Info	7	 7
Menu Left	 Left	8	 8
OK Enter	 Ok	9	 9
Menu Right	 Right	Guide -/-- 1.	 Guide



Power (Red), MUTE, SHIFT (Orange)
 TV, DVD, SAT, AUX
 PLAY MODE: Play, Pause, Stop, Record (Red Dot)
 DISC NAV: Previous, Previous 2, Next 2, Next
 SOUND: LIST, DUAL, AD, SETTINGS: OPT
 PROG: SLEEP, SEARCH, PICTURE, ECO
 E-MANUAL: TV/R, FORMAT, 3D
 D.MENU: TEXT, ZOOM, TIMER, AV (Up Arrow)
 TOP MENU: MENU, DISPLAY: INFO
 OK (Center of D-Pad)
 CLEAR: EXIT, RETURN: BACK
 HOME: SMART, APP, MEDIA
 + VOL, - VOL, + CH, - CH
 Numeric Keypad (1-9, 0, *, / --)
 GUIDE, PRE-CH
 A (Red), B (Green), C (Orange), D (Blue)
 Mandis shop logo and website: www.mandis.tv