 


 







 

 





 
 



 

 

 








 

 

 

 

 

 

 

 

 



Original	Replacement
 DVD	 Shift + 2
 Tuner	 Shift + 6
 TV / Video	 TV/Radio /
 USB	 Shift + 8
 AUX	 Shift + 7
 Power	 Power
 Open / Close	 Eject / Surround
 Dimmer	 Shift + Mute / Dimmer
 1 / RDS Display	 1
 2	 2
 3 / TA	 3
 4 / PTY -	 4
 5 / PTY Search	 5
 6 / PTY +	 6
 7	 7
 8 / Component	 8
 9	 9

Original	Replacement
 Remain	 D.Menu / Top
 0 / Video Sel.	 0
 Cancel	 Shift + Exit / Cancel / Clear
 I<<	 I<< / Preset-
 Step	 Shift + Pause / Step /
 Repeat	 Green / APP / Repeat
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Volume +	 Vol+
 Tuning + / CH +	 CH+ / Page+
 Tuning + / CH +	 Shift + >> /
 Volume -	 Vol-
 Mute	 Mute / Dimmer





Original	Replacement
 Tuning - / CH -	 CH- / Page-
 Tuning - / CH -	 Shift + << /
 Menu	 Menu / Home
 Return	 Back / Return
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Audio	 Audio / Lang I/II
 Sub Title	 Subtitle / EQ
 Exit	 Exit / Cancel / Clear
 Dolby PL II Mode	 Yellow / YouTube / Repeat
 Dolby PL II Effect	 Blue / Prime Video / Random
 DSP / EQ	 Smart / List
 DSP / EQ	 Shift + Subtitle / EQ
 Info	 Info / Angle

Original	Replacement
 SD/HD / Tuner Memory.	 Fav / Marker / PC
 Mo/St / Slow	 Shift + Audio / Lang I/II
 Mo/St / Slow	 Shift + Play /
 Test Tone	 Text / Goto
 Sound Edit	 Sound / Title
 Zoom	 Zoom / Size
 Logo	 Display / Media
 Slide Mode	 Setup / OPT /
 Digest	 Guide / EPG / -/--
 Sleep	 Sleep / Timer
 NT/PAL / Ez. View	 Picture / Format





Original	Replacement
 TV / Video	 TV/Radio /
 Power	 Power
 1 / RDS Display	 1
 2	 2
 3 / TA	 3
 4 / PTY -	 4
 5 / PTY Search	 5
 6 / PTY +	 6
 7	 7
 8 / Component	 8
 9	 9
 0 / Video Sel.	 0
 Volume +	 Vol+
 Tuning + / CH +	 CH+ / Page+
 Volume -	 Vol-
 Mute	 Mute / Dimmer
 Tuning - / CH -	 CH- / Page-

Original	Replacement
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Info	 Info / Angle
 Sleep	 Sleep / Timer

