





 

 












 

 




 






 


 









 
 


 
 

 










 







 



 

 
 


 
 














Original		Replacement		Original		Replacement	
	Power		Power		Down / CH -		CH- / Page-
	Mute		Mute / Dimmer		Down / CH -		Down
	1		1		Right / Vol +		Vol+
	2		2		Right / Vol +		Right
	3		3		Left / Vol -		Left
	4		4		Left / Vol -		Vol-
	5		5		OK		OK
	6		6		Menu		Menu / Home
	7		7		EPG / Guide		Guide / EPG / -/-
	8		8		Exit		Exit / Cancel / Clear
	9		9		USB - List		Smart / List
	FAV		Fav / Marker / PC		Page +		Shift + CH+ /
	0		0		Image - Aspect Ratio		Zoom / Size
	SOS		Sound / Title		Page -		Shift + CH- /
	i / Info		Info / Angle		USB - Media		Display / Media
	Up / CH +		Up		GOTO		Shift + Text /
	Up / CH +		CH+ / Page+		Image - HDMI RES		Picture / Format





Original		Replacement	
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Timer		Shift + Sleep / Timer
	Timer		Sleep / Timer
	I<<		I<< / Preset-
	<<		<< / Tune-
	>>		>> / Tune+
	>>		>> / Preset+
	Red / Subt		Subtitle / EQ
	Red / Subt		Red / Netflix / Search
	Green / Lang		Audio / Lang I/II
	Green / Lang		Green / APP / Repeat
	Yellow / TV/Rad		TV/Radio /
	Yellow / TV/Rad		Yellow / YouTube / Repeat
	Blue / Txt		Blue / Prime Video / Random

Original		Replacement	
	Blue / Txt		Text / Goto

