



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue / Timer		Blue / Prime Video / Random
	Format		Picture / Format
	RES.		AV / Input / RDS
	TTX		Text / Goto
	S-T		Subtitle / EQ
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	PVR List		Smart / List
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	EPG		Guide / EPG / -/-
	Down		Down
	Info		Info / Angle
	CH +		CH+ / Page+
	TV / Rad		TV/Radio /
	Vol +		Vol+
	CH -		CH- / Page-
	Audio		Audio / Lang I/II
	Vol -		Vol-





Original		Replacement		Original	Replacement
1	1	TV 1	1		
2	2	DVD 2	2		
3	3	CD - STB 3	3		
4	4	VIDEO 4	4		
5	5	TAPE 5	5		
6	6	TUNER 6	6		
7	7	AUX - HDD 7	7		
8	8	USB 8	8		
9	9	BLUETOOTH 9	9		
FAV	FAV	PC FAV MARKER	Fav / Marker / PC		
0	0	HDMI - SAT 0	0		
Recall	Recall	RETURN BACK	Back / Return		

