




 
 


 

 

 















 



 

 


 

 

 



 



 

 


















Original		Replacement		Original		Replacement	
	Power DVD		Power		CH-		Ch -
	Direct Tv Rec		TV/R		ShowView		Blue
	DVD		Smart		Manual Skip		Subt
	SD/PC		Media		I<< Skip		I<<
	1		1		>>I Skip		>>I
	2		2		<< Slow/Search		<<
	3		3		Slow/Search >>		>>
	4		4		Stop		Stop
	5		5		Pause		Pause
	6		6		Play		Play
	7		7		Direct Navigator/Top		Menu
	8		8		Function		Options
	9		9		Sub Menu		D. Menu
	0		0		Return		Back
	*/Cancel		Guide		Up		Up
	Input Select		AV		Down		Down
	CH+		Ch +		Right/II>		Right





Original	Replacement
<II/Left	Left
Enter	Ok
Prog/Check	Sleep
Display	Info
Status	3D
Time Slip	Format
Timer	Shift + AV
Erase	Exit
Rec Mode	Shift + Rec
Rec	Rec
A/Ext Link	Red
B	Green
C/Create Chapter	Yellow
Audio	Dual
Power Tv	Shift + Power
AV Tv	Eject
CH+ Tv	Shift + Ch +

Original	Replacement
CH- Tv	Shift + Ch -
Volume+ Tv	Vol +
Volume- Tv	Vol -

