 


 




 
 
 

 
 


 



 
 
 

 



 



 

 


 


 
 






 
 

 
 
 







 







 

 
 
 
 


 

 
 




Original		Replacement		Original		Replacement	
	Power		Power		Play		Play
	Library		Smart		Stop		Stop
	Mute		Mute		Pause		Pause
	1		1		>>		>>
	2		2		>		>>
	3		3		Up		Up
	4		4		Left		Left
	5		5		OK		Ok
	6		6		Right		Right
	7		7		Down		Down
	8		8		Vol +		Vol +
	9		9		Vol -		Vol -
	0		0		Guide		Guide
	Rec		Rec		Menu		Menu
	Last		Pre Ch		Prog +		Ch +
	I<		I<<		Prog -		Ch -
	<<		<<		Back		Back





Original		Replacement		Original	Replacement
	Info		Info		
	Text		Text		
	Exit		Exit		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	AD		Shift + Subt		
	Subt		Subt		
	Audio		Dual		
	A/V		AV		
	HDMI		Media		
	Wide		Format		

