








 



 

 


 

 



 













Original	Replacement
Power On/Off	Power
Display	Display / Media
Input 1	Shift + 1
Input 2	Shift + 2
Input 3	Shift + 3
Input 4	Shift + 4
Input 5	Shift + 5
Input 6	Shift + 6
Input 7	Shift + 7
Input 8	Shift + 8
1	1
2	2
3	3
4	4
5	5
6	6
7	7

Original	Replacement
8	8
9	9
.	Guide / EPG / -/--
0	0
CH Enter	Fav / Marker / PC
P/CH+	CH+ / Page+
I-II MTS	Audio / Lang I/II
Vol+	Vol+
P/CH-	CH- / Page-
Muting	Mute / Dimmer
Vol-	Vol-
Integrator	Smart / List
Up	Up
Home	Menu / Home
Left	Left
Enter/Set	OK
Right	Right





Original	Replacement
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Return	 Shift + Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 PC	 Shift + Fav / Marker / PC
 Input	 AV / Input / RDS
 Ext Input	 Shift + AV / Input / RDS
 TV	 TV/Radio /
 Split	 Sleep / Timer
 Sub Input	 Info / Angle
 Swap	 Back / Return
 (PIP) Shift	 D.Menu / Top
 Drive Off	 Subtitle / EQ
 Factory	 Sound / Title

Original	Replacement
 2nd Factory	 Shift + Sound / Title
 Set Up/Auto	 Setup / OPT /
 ID No. SET -	 << / Tune-
 Clear +	 >> / Tune+
 Power Control	 Shift + Power
 AV Selection	 Text / Goto
 Power Off	 Stop / Hold
 Power On	 Play / Slow
 Zoom/Point	 Zoom / Size
 Zoom-	 I<< / Preset-
 Zoom+	 >>I / Preset+
 Freeze	 Pause / Step / Freeze
 Size/Screen	 Picture / Format





Original	Replacement
Power On/Off	Power
Display	Display / Media
Input 1	Shift + 1
Input 2	Shift + 2
Input 3	Shift + 3
Input 4	Shift + 4
Input 5	Shift + 5
Input 6	Shift + 6
Input 7	Shift + 7
Input 8	Shift + 8
1	1
2	2
3	3
4	4
5	5
6	6
7	7

Original	Replacement
8	8
9	9
.	Guide / EPG / -/-
0	0
CH Enter	Fav / Marker / PC
P/CH+	CH+ / Page+
I-II MTS	Audio / Lang I/II
Vol+	Vol+
P/CH-	CH- / Page-
Muting	Mute / Dimmer
Vol-	Vol-
Integrator	Smart / List
Up	Up
Home	Menu / Home
Left	Left
Enter/Set	OK
Right	Right





Original	Replacement
Exit	Exit / Cancel / Clear
Down	Down
Return	Shift + Back / Return
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
PC	Shift + Fav / Marker / PC
Input	AV / Input / RDS
Ext Input	Shift + AV / Input / RDS
TV	TV/Radio /
Split	Sleep / Timer
Sub Input	Info / Angle
Swap	Back / Return
(PIP) Shift	D.Menu / Top
Drive Off	Subtitle / EQ
Factory	Sound / Title

Original	Replacement
2nd Factory	Shift + Sound / Title
Set Up/Auto	Setup / OPT /
ID No.Set -	<< / Tune-
Clear +	>> / Tune+
Control Power	Shift + Power
AV Selection	Text / Goto
Power Off	Stop / Hold
Power On	Play / Slow
Zoom/Point	Zoom / Size
Zoom-	I<< / Preset-
Zoom+	>>I / Preset+
Freeze	Pause / Step / Freeze
Size/Screen	Picture / Format

