





 



| Original | Replacement |
|--------------|------------------|
| DVD | Shift + 2 |
| VCR | Shift + 4 |
| Input Sel. | AV / Input / RDS |
| Standby / On | Power |
| Open / Close | Eject / Surround |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| TV / VCR | TV/Radio / |
| I<< | I<< / Preset- |

| Original | Replacement |
|--------------|-------------------|
| F.ADV / Skip | Shift + << / |
| Marker | Fav / Marker / PC |
| >>I | >>I / Preset+ |
| << | << / Tune- |
| Stop | Stop / Hold |
| Play / Pause | Shift + Play / |
| Play / Pause | Play / Slow |
| >> | >> / Tune+ |
| PROG/TRK + | CH+ / Page+ |
| PROG/TRK - | CH- / Page- |
| Menu | Menu / Home |
| Return | Back / Return |
| Up | Up |
| Left | Left |
| OK | OK |
| Right | Right |
| Down | Down |





| Original | Replacement |
|--|---|
|  Title List / Disc Menu |  D.Menu / Top |
|  Info |  Info / Angle |
|  Playlist / Title Menu |  Smart / List |
|  Anykey |  Text / Goto |
|  Subtitle |  Subtitle / EQ |
|  Audio |  Audio / Lang I/II |
|  REC |  Rec / Rec Mode |
|  Rec Speed |  Shift + Rec / Rec Mode |
|  Cancel |  Exit / Cancel / Clear |
|  Timer Rec |  Sleep / Timer |
|  Copy To DVD |  Setup / OPT / |
|  Copy To VCR |  Shift + Setup / OPT / Tools |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

