



















 
 
 
 

 

 










Original	Replacement
 Power	 Power
 Tv	 TV/R
 P.Mode	 Format
 S.Mode	 Dual
 Sleep	 Sleep
 Aspect	 3D
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide

Original	Replacement
 Recall	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Source	 AV
 Ch+	 Ch +
 Ch-	 Ch -
 MTS	 Media
 C.C	 Text
 Info/Display	 Info
 Menu	 Menu
 Return	 Back
 Ch.List	 List
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right





Original	Replacement
	Left
	Ok
	Red
	Green
	Yellow
	Blue
	Options
	+ Shift + Pre Ch
	>>
	<<
	+ Shift + Exit
	D. Menu
	Smart
	Subt
	Eject

Original	Replacement

