

 



 



 




 


 
 









 











 





 

 

 




 


 





 








	Original	Replacement		Original	Replacement
	 Power	 Power		 Vol+	 Vol +
	 Mute	 Mute		 Vol-	 Vol -
	 Sleep	 Sleep		 Left	 Left
	 Nicam/A2	 Dual		 Enter	 Ok
	 Still	 Pause		 1	 1
	 16:9	 Format		 2	 2
	 NR.	 Options		 3	 3
	 Surround	 List		 4	 4
	 Picture	 +  Shift + Format		 5	 5
	 Tv/Av	 AV		 6	 6
	 Display	 Info		 7	 7
	 Sound	 +  Shift + Dual		 8	 8
	 Up	 Up		 9	 9
	 CH+	 Ch +		 0	 0
	 CH-	 Ch -		 -/--	 Guide
	 Down	 Down		 Recall	 Pre Ch
	 Right	 Right		 Red	 Red





	Original	Replacement	Original	Replacement
	Green	B		
	Yellow	C		
	Cyan	D		
	Index	E-MANUAL D.MENU		
	Cancel	CLEAR EXIT		
	Subpage	AD SUBT		
	Size	ZOOM		
	Hold			
	Reveal	TOP MENU MENU		
	PIP Window	SHIFT + APP MEDIA		
	PIP Position	SHIFT + HOME SMART		
	PIP Swap	HOME SMART		
	TXT/CC	REPEAT TEXT		
	PIP Size	APP MEDIA		
	PIP On/Off	SHIFT + Power		

