



Original	Replacement
TV Direct	TV/Radio /
Power Audio	Audio / Lang I/II
Power DVR/DVD	OK
Power VCR	Shift + Power
Power STB	Power
Power TV	Shift + OK
DVR/DVD	Fav / Marker / PC
VCR	Shift + Guide / EPG / -/-
TV	Shift + TV/Radio / Program
FM/AM	Smart / List
Video	Shift + Red / Netflix /
Tv/Video	Red / Netflix / Search
Muting	Mute / Dimmer
Channel+	CH+ / Page+
Vol+	Vol+
Channel-	CH- / Page-
Vol-	Vol-

Original	Replacement
Play VCR	Play / Slow
<< VCR	<< / Tune-
Stop/Memory	Stop / Hold
Pause VCR	Pause / Step / Freeze
>> VCR	>> / Tune+
Smart Surround/Setup	Setup / OPT /
Display/On	Display / Media
1 VCR	Shift + 1
1 STB	1
AD Input	AV / Input / RDS
2 VCR	Shift + 2
2 STB	2
Decode	Shift + D.Menu / Top Menu
3 VCR	Shift + 3
3 STB	3
4 VCR	Shift + 4
4 STB	4















	Original	Replacement		Original	Replacement
BASS BOOST	4	Bass Boost			Shift + Audio / Lang I/II
C.TONE	5	5 VCR			Shift + 5
C.TONE	5	5 STB		5	
C.TONE	5	C. Tone			Sound / Title
MIDNIGHT	6	6 VCR			Shift + 6
MIDNIGHT	6	6 STB		6	
MIDNIGHT	6	Midnight			Shift + Smart / List
	7	7 VCR			Shift + 7
	7	7 STB		7	
A.POSITION	8	8 VCR			Shift + 8
A.POSITION	8	8 STB		8	
A.POSITION	8	A. Position			Yellow / YouTube / Repeat
	9	9 VCR			Shift + 9
	9	9 STB		9	
SLIDE EFFECT		Effect			D.Menu / Top
	0	0 VCR			Shift + 0
	0	0 STB		0	

	Original	Replacement		Original	Replacement
100+	+10	+10 TV			Guide / EPG / -/-
DIMMER	DISPLAY	Display/Dimmer			Shift + Display / Media
SURROUND		Surround			Eject / Surround
SLEEP		Sleep			Sleep / Timer
REC PAUSE		Rec Pause			Rec / Rec Mode
	L-FRONT	Front L+			Up
	FRONT-R	Front R+			Shift + Up
	CENTER	Center+			Shift + >> /
TEST TONE		Test Tone			Text / Goto
	L-FRONT	Front L-			Down
	FRONT-R	Front R-			Shift + Down
	CENTER	Center-			Shift + << /
D.EQ.FREQ		D.EQ.Freq			Picture / Format
	L-SURR	Surr L+			Shift + Right
	SURR-R	Surr R+			Right
	SUBWFR	Subwfr+			Shift + CH+ /
D.EQ.LEVEL		D.EQ.Level+			Shift + Vol+





	Original	Replacement		Original	Replacement
	Surr L-	 + 	Shift + Left		
	Surr R-		Left		
	Subwfr-	 + 	Shift + CH- /		
	D.EQ.Level-	 + 	Shift + Vol-		

	Original	Replacement





Original	Replacement
Power Audio	Shift + Power
Power Tv	Power
FM/AM	Eject / Surround
Tv Vol+	Vol+
Channel+ TV	CH+ / Page+
Tv Vol-	Vol-
Channel- TV	CH- / Page-
I<</Tuning-	I<< / Preset-
FM Mode FM/AM	Shift + TV/Radio / Program
>>I/Tuning+	>>I / Preset+
Memory FM/AM	Shift + Smart / List
TA/News/Info	Smart / List
PTY- FM/AM	TV/Radio /
PTY+ FM/AM	Guide / EPG / -/-
PTY Search	Red / Netflix / Search
Display FM/AM	Display / Media
1 FM/AM	Shift + 1

Original	Replacement
1 TV	1
2 FM/AM	Shift + 2
2 TV	2
3 FM/AM	Shift + 3
3 TV	3
4 FM/AM	Shift + 4
4 TV	4
5 FM/AM	Shift + 5
5 TV	5
6 FM/AM	Shift + 6
6 TV	6
7 FM/AM	Shift + 7
7 TV	7
8 FM/AM	Shift + 8
8 TV	8
9 FM/AM	Shift + 9
9 TV	9





Original	Replacement
10 FM/AM	+ Shift + Fav / Marker / PC
10/Tv Return TV	+ Shift + 0
0 TV	0
+10/100+	+ Shift + Guide / EPG / -/-
+10 TV	Fav / Marker / PC

Original	Replacement





Original	Replacement
Power DVD	Power
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
Pause	Pause / Step / Freeze
>>	>> / Tune+
Top Menu	D.Menu / Top
Up	Up
Menu	Menu / Home
Left	Shift + Left
Enter	OK
Right	Right
Down	Down
On Screen	Shift + Display / Media
Audio	Audio / Lang I/II

Original	Replacement
Subtitle	Subtitle / EQ
DVD Zoom	Zoom / Size
HDD Sound Effect	Sound / Title
Set Up	Setup / OPT /
1	1
2	2
3	3
←	Left
4	4
5	5
6	6
VFP Progressive	Smart / List
7	7
8	8
9	9
Angle/Slide Effect	Info / Angle
10	Guide / EPG / -/-






Original	Replacement	Original	Replacement
	0		0
	+10		Fav / Marker / PC
	Return		Back / Return
	Title Group		Shift + Sound / Title
	Cancel		Exit / Cancel / Clear
	Display/Dimmer		Display / Media

Original	Replacement



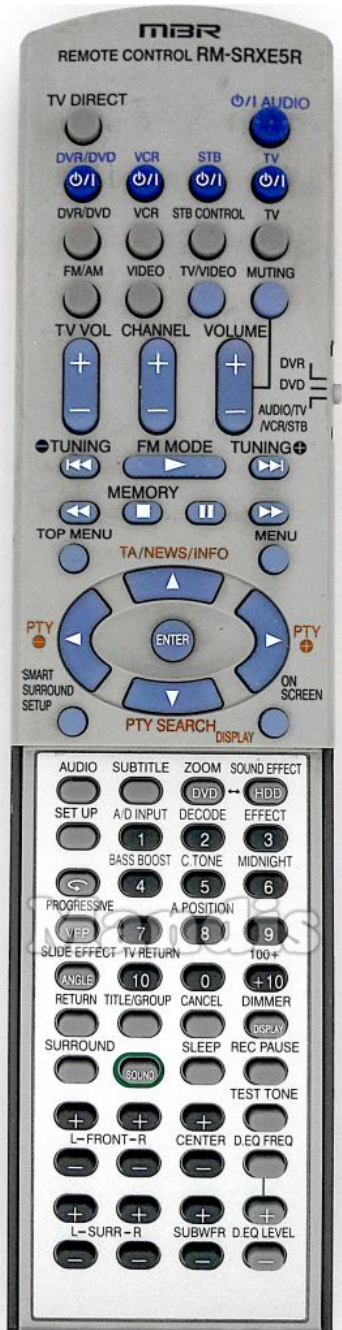

Original	Replacement
Power	Power
Channel+	CH+ / Page+
Channel-	CH- / Page-
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
Pause	Pause / Step / Freeze
>>	>> / Tune+
Top Menu	D.Menu / Top
Up	Up
Menu	Menu / Home
Left	Shift + Left
Enter	OK
Right	Right
Down	Down

Original	Replacement
On Screen	Shift + Display / Media
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
DVD Zoom	Zoom / Size
HDD Sound Effect	Sound / Title
Set Up	Setup / OPT /
1	1
2	2
3	3
4	4
5	5
6	6
VFP Progressive	Smart / List
7	7
8	8
9	9





Original	Replacement	Original	Replacement
Angle/Slide Effect	Info / Angle		
0	0		
Return	Back / Return		
Cancel	Exit / Cancel / Clear		
Display/Dimmer	Display / Media		
Rec Pause	Rec / Rec Mode		

