











 
























 




 

























Original	Replacement
 TV	 Shift + 1
 AV.SV	 AV / Input / RDS
 SCART1	 Shift + 3
 PC	 Shift + Fav / Marker / PC
 SCART2	 Shift + 2
 Mute	 Mute / Dimmer
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Exit	 Exit / Cancel / Clear
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 Menu / Enter	 OK
 Menu / Enter	 Menu / Home
 Right / Vol+	 Right
 Right / Vol+	 Vol+
 Down / P-	 Down
 Down / P-	 CH- / Page-

Original	Replacement
 Text	 Text / Goto
 Red	 Red / Netflix / Search
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Green	 Green / APP / Repeat
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +100	 Guide / EPG / -/--
 0	 0
 RTN	 Back / Return





Original		Replacement		Original		Replacement	
	RTN		Fav / Marker / PC		Reset		Smart / List
	Sound		Sound / Title		Power		Power
	PIP Source Up	 + 	Shift + Up				
	Display		Display / Media				
	PIP Position	 + 	Shift + Left				
	PIP On/Off	 + 	Shift + OK				
	PIP Size	 + 	Shift + Right				
	APC		D.Menu / Top				
	PIP Source	 + 	Shift + Down				
	ARC		Setup / OPT /				
	[□]		Stop / Hold				
	[≡i]		Play / Slow				
	[↑↓]		>> / Tune+				
	[≡?]		Pause / Step / Freeze				
	[≡○]		I<<< / Preset-				
	[≡X]		<<< / Tune-				
	Sleep		Sleep / Timer				

