




 





 





 
 


 

 

 
 
 

 



 



 

 




 















 




 



 






 


 
 
 

 
 


 


 







| Original   | Replacement  | Original  | Replacement  |
|--|--|---|--|
|  Power        |  Power  |  +10             |  Guide          |
|  Quick OSD    |  Media  |  Cancel          |  Exit           |
|  FL Select    |  Smart  |  Play Speed      |  Red            |
|  Open/Close   |  Eject  |  Dialogue        |  Green          |
|  Advanced     |  TV/R   |  Manual Skip     |  Yellow         |
|  Picture Mode |  Format |  Quick Replay    |  List           |
|  Repeat       |  Text   |  I<< Skip        |  I<<            |
|  1            |  1      |  Skip >>I        |  >>I            |
|  2            |  2      |  << Slow/Search  |  <<             |
|  3           |  3     |  Slow/Search >> |  >>            |
|  4          |  4    |  Stop          |  Stop         |
|  5          |  5    |  Pause         |  Pause        |
|  6          |  6    |  Play          |  Play         |
|  7          |  7    |  Top Menu      |  Shift + Menu |
|  8          |  8    |  Menu          |  Menu         |
|  9          |  9    |  Functions     |  D. Menu      |
|  0          |  0    |  Return        |  Back         |





| Original   | Replacement  | Original | Replacement |
|--|--|----------|-------------|
|  Up             |  Up               |          |             |
|  Down           |  Down             |          |             |
|  Right          |  Right            |          |             |
|  Left           |  Left             |          |             |
|  Enter          |  Ok               |          |             |
|  Subtitle       |  Subt             |          |             |
|  Audio          |  Dual             |          |             |
|  Angle/Page     |  Blue             |          |             |
|  Play Mode      |  Shift + Play    |          |             |
|  Setup          |  Options          |          |             |
|  Transfer Mode |  AV              |          |             |
|  Zoom         |  Shift + Eject |          |             |
|  DNR          |  3D             |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |

