



| Original | Replacement | Original | Replacement |
|---|---|--|---|
|  Power |  Power |  -- |  Guide / EPG / -/-- |
|  Up / P+ |  Up |  0 |  0 |
|  Up / P+ |  CH+ / Page+ |  P < P |  Fav / Marker / PC |
|  Menu |  Menu / Home |  PP |  Back / Return |
|  Left |  Left |  Vol+ |  Vol+ |
|  Right |  Right |  I-II |  Audio / Lang I/II |
|  Down / P- |  Down |  Mute |  Mute / Dimmer |
|  Down / P- |  CH- / Page- |  Vol- |  Vol- |
|  1 |  1 |  Info |  Info / Angle |
|  2 |  2 |  Red |  Red / Netflix / Search |
|  3 |  3 |  Green |  Green / APP / Repeat |
|  4 |  4 |  Yellow |  Yellow / YouTube / Repeat |
|  5 |  5 |  Blue |  Blue / Prime Video / Random |
|  6 |  6 |  [TV] |  Shift + 1 |
|  7 |  7 |  [TV] |  TV/Radio / |
|  8 |  8 |  [AV] |  AV / Input / RDS |
|  9 |  9 |  [≡] |  Text / Goto |





| Original | Replacement |
|----------|-----------------------|
| [≡☉] | Subtitle / EQ |
| [/≡] | Picture / Format |
| [≡X] | Exit / Cancel / Clear |
| [≡↕] | Zoom / Size |
| [≡?] | Display / Media |
| [≡i] | Smart / List |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





| Original | Replacement | Original | Replacement |
|----------|-------------|----------|-----------------------------|
| | Power | | Power |
| | Up / P+ | | Up |
| | Up / P+ | | CH+ / Page+ |
| | Menu | | Menu / Home |
| | Left | | Left |
| | Select | | OK |
| | Right | | Right |
| | Down / P- | | CH- / Page- |
| | Down / P- | | Down |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | +10 | | Guide / EPG / -/- |
| | 0 | | 0 |
| | Repeat | | Green / APP / Repeat |
| | Search | | Red / Netflix / Search |
| | A->B | | Yellow / YouTube / Repeat |
| | Display | | Display / Media |
| | Audio | | Audio / Lang I/II |
| | Subtitle | | Subtitle / EQ |
| | Zoom | | Zoom / Size |
| | Prog | | TV/Radio / |
| | C | | Blue / Prime Video / Random |
| | Angle | | Info / Angle |
| | Return | | Back / Return |
| | Time | | Sleep / Timer |
| | << | | << / Tune- |
| | >> | | >> / Tune+ |







































| Original | Replacement | Original | Replacement |
|---|--------------|---|-----------------------|
|  | ⏮ |  | << / Preset- |
|  | ⏭ |  | >> / Preset+ |
|  | ▶/⏸ |  | Play / Slow |
|  | ▶/⏸ |  | Pause / Step / Freeze |
|  | ■ |  | Stop / Hold |
|  | Title |  | Sound / Title |
|  | Open / Close |  | Eject / Surround |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |













| Original | Replacement | Original | Replacement |
|-------------|---|------------|---|
| On/Off |  Power | Menu Right |  Right |
| Mute |  Mute / Dimmer | Menu Down |  Down |
| Txt Stop |  Stop / Hold | Back |  Back / Return |
| Tone+ |  >> / Tune+ | Volume+ |  Vol+ |
| Lang |  Sound / Title | Chan.Up |  CH+ / Page+ |
| Menu audio |  Audio / Lang I/II | Volume- |  Vol- |
| Subt.List |  Subtitle / EQ | Display |  Display / Media |
| Txt Expand |  Zoom / Size | Chan.Down |  CH- / Page- |
| Sleep Timer |  Sleep / Timer | 1 |  1 |
| Return TV |  TV/Radio / | 2 |  2 |
| Menu video |  D.Menu / Top | 3 |  3 |
| Text |  Text / Goto | 4 |  4 |
| Menu |  Menu / Home | 5 |  5 |
| Menu Up |  Up | 6 |  6 |
| Info |  Info / Angle | 7 |  7 |
| Menu Left |  Left | 8 |  8 |
| OK Enter |  OK | 9 |  9 |

| Original | Replacement | Original | Replacement |
|-------------|---|------------|---|
| On/Off |  Power | Menu Right |  Right |
| Mute |  Mute / Dimmer | Menu Down |  Down |
| Txt Stop |  Stop / Hold | Back |  Back / Return |
| Tone+ |  >> / Tune+ | Volume+ |  Vol+ |
| Lang |  Sound / Title | Chan.Up |  CH+ / Page+ |
| Menu audio |  Audio / Lang I/II | Volume- |  Vol- |
| Subt.List |  Subtitle / EQ | Display |  Display / Media |
| Txt Expand |  Zoom / Size | Chan.Down |  CH- / Page- |
| Sleep Timer |  Sleep / Timer | 1 |  1 |
| Return TV |  TV/Radio / | 2 |  2 |
| Menu video |  D.Menu / Top | 3 |  3 |
| Text |  Text / Goto | 4 |  4 |
| Menu |  Menu / Home | 5 |  5 |
| Menu Up |  Up | 6 |  6 |
| Info |  Info / Angle | 7 |  7 |
| Menu Left |  Left | 8 |  8 |
| OK Enter |  OK | 9 |  9 |





| Original | Replacement | Original | Replacement |
|---------------|---|----------|-------------|
| Guide -/-- 1. |  Guide / EPG / -/-- | | |
| 0/10 |  0 | | |
| 2.Fav P/C 2. |  Fav / Marker / PC | | |
| Red |  Red / Netflix / Search | | |
| Green |  Green / APP / Repeat | | |
| Yellow |  Yellow / YouTube / Repeat | | |
| Blue |  Blue / Prime Video / Random | | |
| Lang |  Shift + Audio / Lang I/II | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

| Original | Replacement | Original | Replacement |
|----------|-------------|----------|-------------|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

