



 

 
 
 




 




Original		Replacement		Original		Replacement	
	Standby		Power		Rec List		List
	DTV/VCR		AV		Favorite		Pre Ch
	Mute		Mute		Game		Smart
	Info		Info		Recall		Back
	Play		Play		1		1
	Pause		Pause		2		2
	Menu		Menu		3		3
	Exit		Exit		4		4
	CH+		Ch +		5		5
	CH-		Ch -		6		6
	Up		Up		7		7
	Down		Down		8		8
	Right		Right		9		9
	Left		Left		0		0
	OK		Ok		Tv/Radio		TV/R
	Vol+		Vol +		Audio		Dual
	Vol-		Vol -		Subtitle		Subt





Original	Replacement	Original	Replacement
TEXT	Text	REPEAT TEXT	Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
RECORD	Record	REC MODE	Rec
STOP	Stop		Stop
REV	<<		<<
FWD	>>		>>

