 
 
 






 










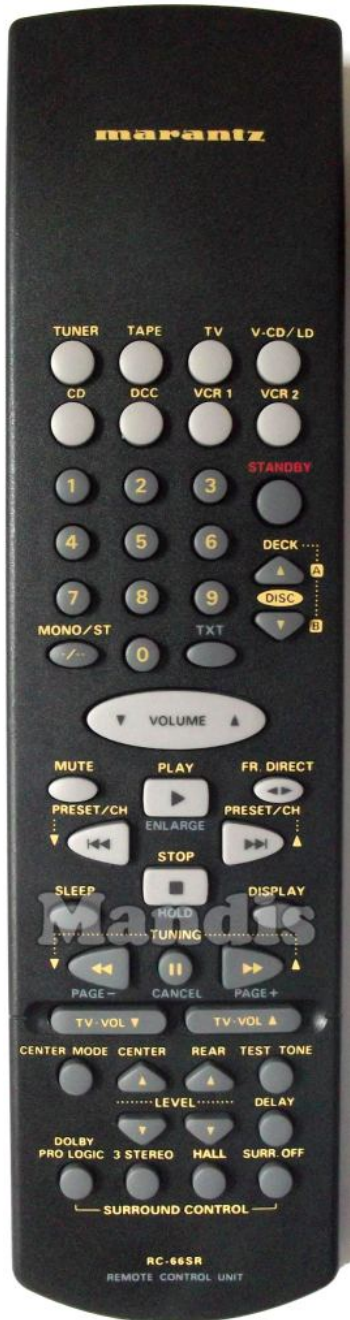





 





Original		Replacement		Original		Replacement	
	Tuner		Shift + 6		9		9
	Tape		Shift + 5		Mono/ST		Menu / Home
	TV		Shift + 1		0		0
	V-CD		Shift + 2		Volume-		Vol-
	CD		Shift + 3		Volume+		Vol+
	DCC		Shift + 8		Mute		Mute / Dimmer
	VCR1		Shift + 4		FR.Direct		D.Menu / Top
	VCR 2		Shift + 7		Preset-		I<< / Preset-
	1		1		Preset+		>>I / Preset+
	2		2		Sleep		Sleep / Timer
	3		3		Display		Display / Media
	Standby		Power		Tuning-		<< / Tune-
	4		4		Tuning+		>> / Tune+
	5		5		Vol TV-		Shift + Vol-
	6		6		Vol TV+		Shift + Vol+
	7		7		Center Mode		OK
	8		8		Center Up		Up











 



 



 











 



 



 


 




 



 



 



 













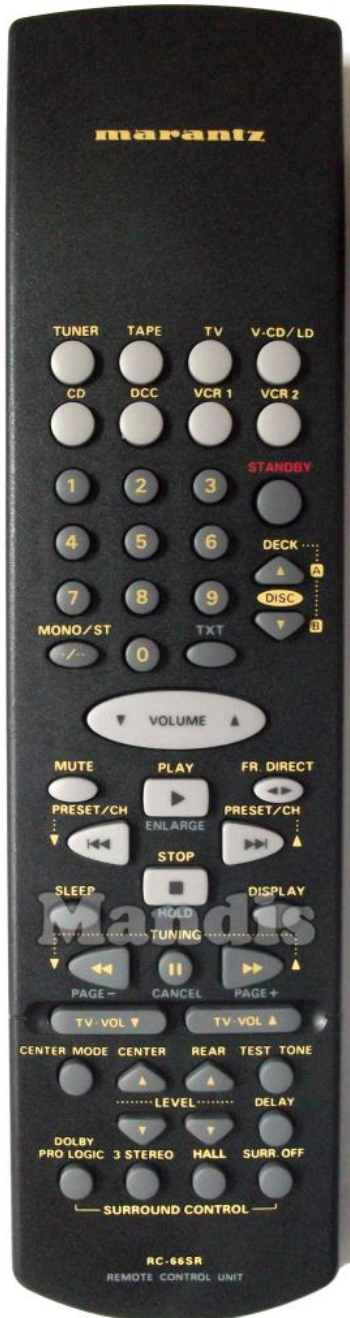 
Original		Replacement		Original		Replacement	
	Rear Up		Right				
	Test Tone		Text / Goto				
	Center Down		Down				
	Rear Down		Left				
	Delay		Setup / OPT /				
	Dolby Pro Logic		Sound / Title				
	3 Stereo		Audio / Lang I/II				
	Hall		Subtitle / EQ				
	Surr. Off		Eject / Surround				







 

 





 



 





Original		Replacement		Original		Replacement	
	Tuner		Shift + 6		8		8
	Tape		Shift + 5		9		9
	TV		Shift + 1		Disc Down		CH- / Page-
	V-CD		Shift + 2		0		0
	CD		Shift + 3		Volume-		Vol-
	DCC		Shift + 8		Volume+		Vol+
	VCR 1		Shift + 4		Mute		Mute / Dimmer
	VCR 2		Shift + 7		Play		Play / Slow
	1		1		I<		I<< / Preset-
	2		2		>I		>>I / Preset+
	3		3		Sleep		Sleep / Timer
	Standby		Power		Stop		Stop / Hold
	4		4		Display		Display / Media
	5		5		<<		<< / Tune-
	6		6		Pause		Pause / Step / Freeze
	Disc Up		CH+ / Page+		>>		>> / Tune+
	7		7		Center Mode		OK











 







 



 















 


 




 

























Original		Replacement		Original		Replacement	
	Center Up		Up				
	Rear Up		Right				
	Test Tone		Text / Goto				
	Center Down		Down				
	Rear Down		Left				
	Delay		Setup / OPT /				
	Dolby Pro Logic		Sound / Title				
	3 Stereo		Audio / Lang I/II				
	Hall		Subtitle / EQ				
	Surr.Off		Eject / Surround				

























Original		Replacement		Original		Replacement	
	Tuner		Shift + 6		8		8
	Tape		Shift + 5		9		9
	TV		Shift + 1		Disc Down		CH- / Page-
	V-CD		Shift + 2		0		0
	CD		Shift + 3		Volume-		Vol-
	DCC		Shift + 8		Volume+		Vol+
	VCR 1		Shift + 4		Mute		Mute / Dimmer
	VCR 2		Shift + 7		Play		Play / Slow
	1		1		I<		I<< / Preset-
	2		2		>I		>>I / Preset+
	3		3		Sleep		Sleep / Timer
	Standby		Power		Stop		Stop / Hold
	4		4		Display		Display / Media
	5		5		<<		<< / Tune-
	6		6		Pause		Pause / Step / Freeze
	Disc Up		CH+ / Page+		>>		>> / Tune+
	7		7		Center Mode		OK





 

 
 
 

 





 






Original		Replacement		Original		Replacement	
	Center Up		Up				
	Rear Up		Right				
	Test Tone		Text / Goto				
	Center Down		Down				
	Rear Down		Left				
	Delay		Setup / OPT /				
	Dolby Pro Logic		Sound / Title				
	3 Stereo		Audio / Lang I/II				
	Hall		Subtitle / EQ				
	Surr.Off		Eject / Surround				





Original		Replacement		Original		Replacement	
	Tuner		Shift + 6		9		9
	Tape		Shift + 5		-/--		Guide / EPG / -/--
	TV		Shift + 1		0		0
	V-CD		Shift + 2		TXT		Text / Goto
	CD		Shift + 3		Rcvr Volume-		Shift + Vol-
	DCC		Shift + 8		Rcvr Volume+		Shift + Vol+
	VCR1		Shift + 4		Rcvr Mute		Shift + Mute / Dimmer
	VCR 2		Shift + 7		TV Mute		Mute / Dimmer
	1		1		Enlarge		Zoom / Size
	2		2		CH Down		CH- / Page-
	3		3		CH Up		CH+ / Page+
	Standby		Power		Sleep		Sleep / Timer
	4		4		Hold		Stop / Hold
	5		5		Display		Display / Media
	6		6		Page-		Shift + CH- /
	7		7		Cancel		Exit / Cancel / Clear
	8		8		Page+		Shift + CH+ / Page+





Original		Replacement		Original		Replacement	
	Vol TV +		Vol+				
	Vol TV -		Vol-				
	Center Mode		OK				
	Center Up		Up				
	Rear Up		Right				
	Test Tone		Shift + Text /				
	Center Down		Down				
	Rear Down		Left				
	Delay		Setup / OPT /				
	Dolby Pro Logic		Sound / Title				
	3 Stereo		Audio / Lang I/II				
	Hall		Subtitle / EQ				
	Surr.Off		Eject / Surround				

