

 

















 

 





 







 

 







 



 

 
 
 

 









 





Original	Replacement	Original	Replacement
 Power	 Power	 Exit	 Exit / Cancel / Clear
 1	 1	 ?	 D.Menu / Top
 2	 2	 @	 Smart / List
 3	 3	 Menu	 Menu / Home
 4	 4	 Up	 Up
 5	 5	 Back	 Back / Return
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Tools	 Setup / OPT /
 FAV	 Fav / Marker / PC	 Down	 Down
 0	 0	 Guide	 Guide / EPG / -/--
 TXT	 Text / Goto	 Vol+	 Vol+
 Red	 Red / Netflix / Search	 Source	 AV / Input / RDS
 Green	 Green / APP / Repeat	 P+	 CH+ / Page+
 Yellow	 Yellow / YouTube / Repeat	 Vol-	 Vol-
 Blue	 Blue / Prime Video / Random	 Mute	 Mute / Dimmer





Original	Replacement	Original	Replacement
 P-	 CH- / Page-		
 I<	 I<< / Preset-		
 >I	 >>I / Preset+		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 3D	 Picture / Format		
 ..0	 Zoom / Size		
 [...].	 Subtitle / EQ		
 Netflix	 Shift + Red / Netflix /		
 My Media	 Display / Media		

