

 
 

 


 














 



 


 







 



 
 





 

 



 

 

 
 






 


Original	Replacement	Original	Replacement
 Standby/On	 Power	 Down	 Down
 Rec	 Rec	 Right	 Right
 1	 1	 Left	 Left
 2	 2	 >>	 >>
 3	 3	 <<	 <<
 4	 4	 Menu	 Menu
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 >I</Still	 Pause
 8	 8	 P+	 Ch +
 9	 9	 P-	 Ch -
 0	 0	 Mute	 Mute
 Status/Exit	 Exit	 >I/Index	 Text
 Clear	 Shift + Exit	 Slow	 AV
 Play	 Play	 System	 Media
 Stop	 Stop	 Turbo Timer	 Options
 Up	 Up	 SV/V+	 Format



