



Original	Replacement	Original	Replacement
 Power On	 Power	 Clear	 Exit / Cancel / Clear
 Power Off	 Shift + Power	 0	 0
 Dimmer	 Mute / Dimmer	 Search Mode	 Shift + Red / Netflix /
 Open/Close	 Eject / Surround	 Red	 Red / Netflix / Search
 A-B Repeat	 Shift + Yellow / YouTube /	 Green	 Green / APP / Repeat
 1	 1	 Yellow	 Yellow / YouTube / Repeat
 2	 2	 Blue	 Blue / Prime Video / Random
 3	 3	 Top Menu	 D.Menu / Top
 Repeat	 Shift + Green / APP /	 Up	 Up
 4	 4	 Pop Up Menu /	 Menu / Home
 5	 5	 Left	 Left
 6	 6	 Enter	 OK
 Random	 Shift + Blue / Prime	 Right	 Right
 7	 7	 Down	 Down
 8	 8	 Setup	 Setup / OPT /
 9	 9	 Return	 Back / Return
 Zoom	 Zoom / Size	 Angle	 Info / Angle





	Original	Replacement	Original	Replacement
		Subtitle		Subtitle / EQ
		Audio		Audio / Lang I/II
		Pure Direct		Sound / Title
		Display		Display / Media
		Mode		Smart / List
		I<< Skip		I<< / Preset-
		Skip >>I		>>I / Preset+
		Stop		Stop / Hold
		Play		Play / Slow
		<<		<< / Tune-
		Still/Pause		Pause / Step / Freeze
		>>		>> / Tune+
		HDMI		Picture / Format
		Input Up Amp/Receiver		CH+ / Page+
		Vol+		Vol+
		Input Down Amp/Receiver		CH- / Page-
		Vol-		Vol-



Amp/Receiver