




 




 
 
 
 
 



Original	Replacement
 Power	 Power
 Open / Close	 Eject
 Sleep	 Sleep
 Dimmer /	 TV/R
 DVD	 Shift + 1
 Tuner	 Shift + 2
 Aux	 Shift + 3
 1 / RDS Display	 1
 2	 2
 3 / TA	 3
 4 / PTY -	 4
 5 / PTY Search	 5
 6 / PTY +	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 Remain	 Guide
 Cancel	 Exit
 I<<	 I<<
 I<<	 <<
 Stop	 Stop
 Play / Pause	 Play
 Play / Pause	 Pause
 >>I	 >>
 >>I	 >>I
 Mute	 Mute
 Volume +	 Vol +
 Volume -	 Vol -
 Tuning + / CH +	 Ch +
 Tuning - / CH -	 Ch -
 Super 5.1 / V-H/P	 List
 Sub Title	 Subt
 Menu	 Menu





Original	Replacement
	 Info
	 Dual
	 Up
	 Left
	 Ok
	 Right
	 Down
	 Back
	 Shift + Eject
	 Red
	 Green
	 Yellow
	 Text
	 Options
	 D. Menu
	 Shift + D. Menu
	 3D

Original	Replacement
	 Shift + Pause
	 Shift + Text
	 Shift + Play
	 Pre Ch
	 AV
	 Media
	 Smart





Original	Replacement
Power	Power
Sleep	Sleep
Dimmer / TA	TV/R
1 / RDS Display	1
2	2
3 / TA	3
4 / PTY -	4
5 / PTY Search	5
6 / PTY +	6
7	7
8	8
9	9
0	0
Volume +	Vol +
Volume -	Vol -
Tuning + / CH +	Ch +
Tuning - / CH -	Ch -

Original	Replacement
Menu	Menu
Info	Info
Up	Up
Right	Right
Down	Down
Left	Left
Enter	Ok
Mute	Mute

