









 
 



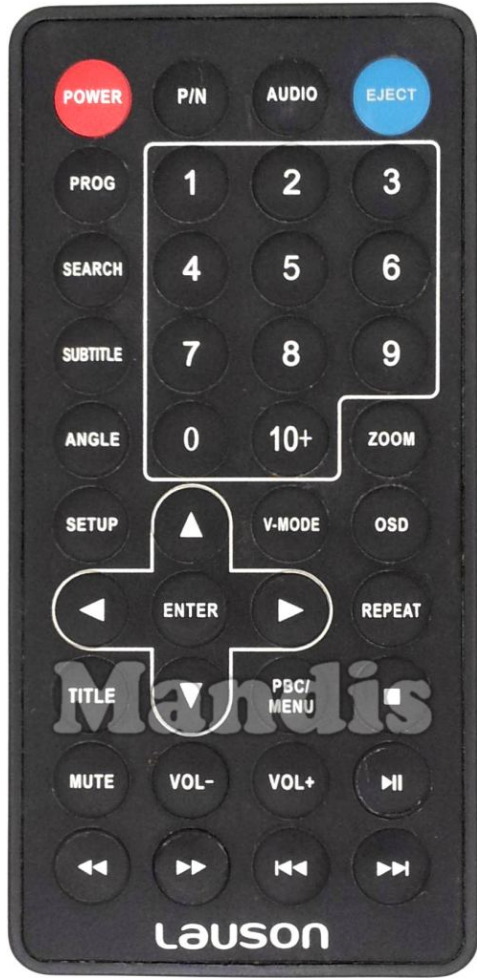




	Original	Replacement		Original	Replacement
	Power		Power		0
	P/N		Smart		10+
	Audio		Dual		Zoom
	Eject		Eject		Setup
	Prog		Sleep		V-Mode
	Search		TV/R		OSD
	Subtitle		Subt		Repeat
	Angle		Red		Title
	1		1		PBC/Menu
	2		2		Up
	3		3		Down
	4		4		Right
	5		5		Left
	6		6		Enter
	7		7		Stop
	8		8		Play
	9		9		Pause





	Original	Replacement	Original	Replacement
	>>	>>		
	<<	<<		
	>>	>>		
	<<	<<		
	Vol+	+ VOL		
	Vol-	- VOL		
	Mute	MUTE		

