



























































 










| Original | Replacement |
|--|---|
|  Power |  Power |
|  Open / Close |  Eject / Surround |
|  OSD |  Display / Media |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Subtitle |  Subtitle / EQ |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  Angle |  Info / Angle |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Language |  Audio / Lang I/II |
|  R/L |  Blue / Prime Video / Random |
|  0 |  0 |

| Original | Replacement |
|--|---|
|  10+ |  Guide / EPG / -/-- |
|  Setup |  Setup / OPT / |
|  Mute |  Mute / Dimmer |
|  Clear |  Exit / Cancel / Clear |
|  Prog |  TV/Radio / |
|  Time |  Sleep / Timer |
|  Up |  Up |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Down |  Down |
|  Title |  Sound / Title |
|  Menu |  Menu / Home |
|  Default |  AV / Input / RDS |
|  << |  << / Tune- |
|  Play / Pause |  Play / Slow |
|  Play / Pause |  Pause / Step / Freeze |














































 




| Original | Replacement | Original | Replacement |
|------------|---|------------|---|
| On/Off |  Power | Progr. |  TV/Radio / |
| Audio Off |  Mute / Dimmer | Top Menu |  D.Menu / Top |
| Play |  Play / Slow | Setup |  Setup / OPT / |
| Pause |  Pause / Step / Freeze | C/CH |  Text / Goto |
| Stop |  Stop / Hold | DVD/TV |  AV / Input / RDS |
| Record |  Rec / Rec Mode | Menu |  Menu / Home |
| Rewind |  << / Tune- | Menu Up |  Up |
| F.Forward |  >> / Tune+ | Angle |  Info / Angle |
| Prev. |  I<< / Preset- | Menu Left |  Left |
| Next |  >>I / Preset+ | OK Enter |  OK |
| Title |  Sound / Title | Menu Right |  Right |
| Audio |  Audio / Lang I/II | Pbc |  Exit / Cancel / Clear |
| Subt. |  Subtitle / EQ | Menu Down |  Down |
| Open/Close |  Eject / Surround | Return |  Back / Return |
| Auto/Track |  Picture / Format | Volume+ |  Vol+ |
| Zoom |  Zoom / Size | Resume |  Smart / List |
| Np |  Sleep / Timer | Slow Up |  CH+ / Page+ |

| Original | Replacement | Original | Replacement |
|------------|---|------------|---|
| On/Off |  Power | Progr. |  TV/Radio / |
| Audio Off |  Mute / Dimmer | Top Menu |  D.Menu / Top |
| Play |  Play / Slow | Setup |  Setup / OPT / |
| Pause |  Pause / Step / Freeze | C/CH |  Text / Goto |
| Stop |  Stop / Hold | DVD/TV |  AV / Input / RDS |
| Record |  Rec / Rec Mode | Menu |  Menu / Home |
| Rewind |  << / Tune- | Menu Up |  Up |
| F.Forward |  >> / Tune+ | Angle |  Info / Angle |
| Prev. |  I<< / Preset- | Menu Left |  Left |
| Next |  >>I / Preset+ | OK Enter |  OK |
| Title |  Sound / Title | Menu Right |  Right |
| Audio |  Audio / Lang I/II | Pbc |  Exit / Cancel / Clear |
| Subt. |  Subtitle / EQ | Menu Down |  Down |
| Open/Close |  Eject / Surround | Return |  Back / Return |
| Auto/Track |  Picture / Format | Volume+ |  Vol+ |
| Zoom |  Zoom / Size | Resume |  Smart / List |
| Np |  Sleep / Timer | Slow Up |  CH+ / Page+ |





| Original | Replacement | Original | Replacement |
|------------|---|-------------|---|
| On/Off |  Power | Progr. |  TV/Radio / |
| Audio Off |  Mute / Dimmer | Top Menu |  D.Menu / Top |
| Play |  Play / Slow | Setup |  Setup / OPT / |
| Pause |  Pause / Step / Freeze | Resume |  Text / Goto |
| Stop |  Stop / Hold | DVD/TV |  AV / Input / RDS |
| Record |  Rec / Rec Mode | Menu |  Menu / Home |
| Rewind |  << / Tune- | Menu Up |  Up |
| F.Forward |  >> / Tune+ | Angle |  Info / Angle |
| Prev. |  I<< / Preset- | Menu Left |  Left |
| Next |  >>I / Preset+ | OK Enter |  OK |
| Title |  Sound / Title | Menu Right |  Right |
| Lang |  Audio / Lang I/II | Clear/00:00 |  Exit / Cancel / Clear |
| Subt. |  Subtitle / EQ | Menu Down |  Down |
| Open/Close |  Eject / Surround | Return |  Back / Return |
| Auto/Track |  Picture / Format | Volume+ |  Vol+ |
| Zoom |  Zoom / Size | Mode |  Smart / List |
| Pbc |  Sleep / Timer | Slow Up |  CH+ / Page+ |

| Original | Replacement | Original | Replacement |
|------------|---|-------------|---|
| On/Off |  Power | Progr. |  TV/Radio / |
| Audio Off |  Mute / Dimmer | Top Menu |  D.Menu / Top |
| Play |  Play / Slow | Setup |  Setup / OPT / |
| Pause |  Pause / Step / Freeze | Resume |  Text / Goto |
| Stop |  Stop / Hold | DVD/TV |  AV / Input / RDS |
| Record |  Rec / Rec Mode | Menu |  Menu / Home |
| Rewind |  << / Tune- | Menu Up |  Up |
| F.Forward |  >> / Tune+ | Angle |  Info / Angle |
| Prev. |  I<< / Preset- | Menu Left |  Left |
| Next |  >>I / Preset+ | OK Enter |  OK |
| Title |  Sound / Title | Menu Right |  Right |
| Lang |  Audio / Lang I/II | Clear/00:00 |  Exit / Cancel / Clear |
| Subt. |  Subtitle / EQ | Menu Down |  Down |
| Open/Close |  Eject / Surround | Return |  Back / Return |
| Auto/Track |  Picture / Format | Volume+ |  Vol+ |
| Zoom |  Zoom / Size | Mode |  Smart / List |
| Pbc |  Sleep / Timer | Slow Up |  CH+ / Page+ |



