















 

 

 











 
















 







 



 

 









 



 













 
 


 




 





Original		Replacement		Original		Replacement	
	[ ]→		Exit / Cancel / Clear		[≡]		Text / Goto
	Power		Power		Left		Left
	[1 2]		Shift + Red / Netflix /		OK		OK
	[← →]		Shift + Green / APP /		Right		Right
	[   >   <   ]		Shift + Yellow / YouTube /		[> <]		Pause / Step / Freeze
	Red / Rec		Rec / Rec Mode		Down		Down
	Red / Rec		Red / Netflix / Search		[...]		Subtitle / EQ
	Green / <<		Green / APP / Repeat		Vol+		Vol+
	Green / <<		<< / Tune-		Mute		Mute / Dimmer
	Yellow / Stop		Stop / Hold		P+		CH+ / Page+
	Yellow / Stop		Yellow / YouTube / Repeat		Vol-		Vol-
	Blue / Play		Blue / Prime Video / Random		P-		CH- / Page-
	Blue / Play		Play / Slow		1		1
	White / >>		>> / Tune+		2		2
	White / >>		Fav / Marker / PC		3		3
	[   ]		Shift + Guide / EPG / -/-		4		4
	Up		Up		5		5






 










 



 

 



 


 
 





 





 



 















 









	Original	Replacement	Original	Replacement
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	[i+]	 Info / Angle		
	0	 0		
	P<P / -/--	 Guide / EPG / -/--		
	[⊙]	 Sleep / Timer		
	[?]	 AV / Input / RDS		
	[↑↓] / Zoom	 Zoom / Size		
	Smart Sound	 Sound / Title		
	[ <> ]	 D.Menu / Top		
	Smart Picture	 Picture / Format		
	Instant Rec	 +  Shift + Rec / Rec Mode		
	I-II	 Audio / Lang I/II		
	DNR	 Back / Return		
	[ ]	 Setup / OPT /		


















 














 












 











 


 



Original	Replacement	Original	Replacement
 DVD	 Shift + 2	 Vol+	 Vol+
 [1 2]	 Red / Netflix / Search	 Mute	 Mute / Dimmer
 [< >]	 Green / APP / Repeat	 P+	 CH+ / Page+
 [   >   <   ]	 Yellow / YouTube / Repeat	 Vol-	 Vol-
 <<	 << / Tune-	 P-	 CH- / Page-
 Stop	 Stop / Hold	 1	 1
 Play	 Play / Slow	 2	 2
 >>	 >> / Tune+	 3	 3
 [   ]	 Shift + Guide / EPG / -/-	 4	 4
 Up	 Up	 5	 5
 [≡]	 Text / Goto	 6	 6
 Left	 Left	 7	 7
 OK	 OK	 8	 8
 Right	 Right	 9	 9
 [> <]	 Pause / Step / Freeze	 [i+]	 Info / Angle
 Down	 Down	 0	 0
 [...]	 Subtitle / EQ	 P<P / -/-	 Guide / EPG / -/-









 



 













 
 


 




 





Original		Replacement		Original		Replacement	
	[ ]→		Exit / Cancel / Clear		[≡]		Text / Goto
	Power		Power		Left		Left
	[1 2]		Shift + Red / Netflix /		OK		OK
	[← →]		Shift + Green / APP /		Right		Right
	[   >   <   ]		Shift + Yellow / YouTube /		[> <]		Pause / Step / Freeze
	Red / Rec		Red / Netflix / Search		Down		Down
	Red / Rec		Rec / Rec Mode		[...]		Subtitle / EQ
	Green / <<		Green / APP / Repeat		Vol+		Vol+
	Green / <<		<< / Tune-		Mute		Mute / Dimmer
	Yellow / Stop		Stop / Hold		P+		CH+ / Page+
	Yellow / Stop		Yellow / YouTube / Repeat		Vol-		Vol-
	Blue / Play		Blue / Prime Video / Random		P-		CH- / Page-
	Blue / Play		Play / Slow		1		1
	White / >>		Fav / Marker / PC		2		2
	White / >>		>> / Tune+		3		3
	[   ]		Shift + Guide / EPG / -/-		4		4
	Up		Up		5		5



 






 



 


 







 













 


 
























 





	Original	Replacement	Original	Replacement
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	[i+]	 Info / Angle		
	0	 0		
	P<P / -/--	 Guide / EPG / -/--		
	[⊙]	 Sleep / Timer		
	[?]	 AV / Input / RDS		
	[↑↓] / Zoom	 Zoom / Size		
	Smart Sound	 Sound / Title		
	[ <> ]	 D.Menu / Top		
	Smart Picture	 Picture / Format		
	Instant Rec	 +  Shift + Rec / Rec Mode		
	I-II	 Audio / Lang I/II		
	DNR	 Back / Return		
	[ ]	 Setup / OPT /		





Original	Replacement	Original	Replacement
 [ ]→	 CLEAR EXIT CANCEL Exit / Cancel / Clear		 Down
 Power	 Power	 [...]	 EQ SUBTITLE Subtitle / EQ
 [1 2]	 NETFLIX SEARCH Red / Netflix / Search	 Vol+	 + VOL Vol+
 [← →]	 APP REPEAT Green / APP / Repeat	 Mute	 DIMMER MUTE Mute / Dimmer
 [   > < ]	 YouTube REPEAT A-B Yellow / YouTube / Repeat	 P+	 + CH PAGE CH+ / Page+
 Rec	 REC MODE REC / Rec Mode	 Vol-	 VOL - Vol-
 <<	 TUNE- << / Tune-	 P-	 CH PAGE - CH- / Page-
 Stop	 HOLD Stop / Hold	 1	 TV 1 1
 Play	 SLOW Play / Slow	 2	 DVD 2 2
 >>	 TUNE+ >> / Tune+	 3	 CD - STB 3 3
 [   ]	 SHIFT + GUIDE EPG Shift + Guide / EPG / -/-	 4	 VIDEO 4 4
 Up	 Up	 5	 TAPE 5 5
 [≡]	 GOTO TEXT Text / Goto	 6	 TUNER 6 6
 Left	 Left	 7	 AUX - HDD 7 7
 OK	 OK	 8	 USB 8 8
 Right	 Right	 9	 BLUETOOTH 9 9
 [> <]	 STEP - FREEZE II Pause / Step / Freeze	 [i+]	 ANGLE INFO Info / Angle



