

 




 

 

 
 


 
 
 

 

 

 

 
 
 
 








Original	Replacement	Original	Replacement
PWR On/Off	 Power	Volume+	 Vol +
Mute	 Mute	CH/Page+	 Ch +
Epg	 Shift + Guide	Volume-	 Vol -
Sleep Timer	 Sleep	Audio	 Dual
Info	 Info	CH/Page-	 Ch -
TV	 TV/R	1. ?	 1
Video	 D. Menu	2abc	 2
TV/SAT	 AV	3def	 3
Menu	 Menu	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Shift + Info	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 Ok	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit	Guide Pilote	 Guide
Menu Down	 Down	0/10	 0
Back	 Back	FAV Pref.	 Pre Ch



Original	Replacement	Original	Replacement
Red		Red	
Green		Green	
Yellow		Yellow	
SAT Sky		Smart	
Blue		Blue	
Freeze		Stop	
East		>>	
Dec/Pause		Pause	
Browse		Media	
Lang./Rewind		<<	
H/V Play		Play	
LNB F.Forward		>>	

