

 
 
 



 

 


 







 


 
 

 
 




 
 
 
 
 




 


 



 
 

 








 


	Original	Replacement		Original	Replacement
	Power		Power		<<
	1		1		>>
	2		2		<<
	Eject/Open-Close		Eject		Stop
	VCR		Smart		Play
	DVD		Media		Pause/Step
	3		3		Disc Menu/List
	4		4		Home
	5		5		Shift + Smart
	6		6		Display
	7		7		Return
	8		8		Enter
	9		9		Up
	0		0		PR/CH/TRK+
	Clear		Exit		PR/CH/TRK-
	AV/Input		AV		Down
	>>		>>		Right
					Left





Original	Replacement
 O))/Audio	 Dual
 [...] / Subtitle	 Subt
 Zoom	 Shift + Eject
 I.Skip	 3D
 Rec	 Rec
 TV/VCR	 TV/R
 CHP.ADD	 Text
 Title	 Options
 Rec Mode	 Shift + Rec
 Dubbing	 Mute
 Play Mode	 Shift + Play
 Marker	 Pre Ch
 Search	 Shift + TV/R
 Thumbnail	 List
 Power Tv	 Shift + Power
 AV/Input Tv	 Shift + AV
 Vol+ Tv	 Vol +

Original	Replacement
 Vol- Tv	 Vol -
 PR/CH+ Tv	 Shift + Ch +
 PR/CH- Tv	 Shift + Ch -

