

 
 
 

 
 
 









 
 

 
 

 

 
 
 

 
 

 
 

 
 


 

 
 



 


 





| | Original | Replacement | | Original | Replacement |
|---|------------------|---|-------|---|----------------|
|  | Power |  | Power |  | << |
|  | 1 |  | 1 |  | >> |
|  | 2 |  | 2 |  | << |
|  | Eject/Open-Close |  | Eject |  | Stop |
|  | VCR |  | Smart |  | Play |
|  | DVD |  | Media |  | Pause/Step |
|  | 3 |  | 3 |  | Disc Menu/List |
|  | 4 |  | 4 |  | Home |
|  | 5 |  | 5 |  | Shift + Smart |
|  | 6 |  | 6 |  | Display |
|  | 7 |  | 7 |  | Return |
|  | 8 |  | 8 |  | Enter |
|  | 9 |  | 9 |  | Up |
|  | 0 |  | 0 |  | Ch + |
|  | Clear |  | Exit |  | Ch - |
|  | AV/Input |  | AV |  | Down |
|  | >> |  | >> |  | Right |
| | | | |  | Left |



