














































Original	Replacement
 Power	 Power
 Eject/Open/Close	 Eject / Surround
 Power Tv	 Shift + Power
 DVD	 Shift + 2
 VCR	 Shift + 4
 Av Input	 AV / Input / RDS
 AV Input Tv	 Shift + AV / Input / RDS
 1	 1
 2	 2
 3	 3
 PR/CH+ Tv	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 PR/CH- Tv	 CH- / Page-
 7	 7
 8	 8

Original	Replacement
 9	 9
 Vol+ Tv	 Vol+
 I.Skip	 Blue / Prime Video / Random
 0	 0
 Dubbing	 Yellow / YouTube / Repeat
 Vol- Tv	 Vol-
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Pause/step	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Home	 Menu / Home
 Up/PR/CH/(TRK)	 Up
 Disc Menu/List	 D.Menu / Top
 Disc Menu/List	 Smart / List





Original	Replacement
 Left	 Left
 Enter	 OK
 Right	 Right
 Display	 Display / Media
 Down/PR/CH/TRK	 Down
 Return	 Back / Return
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Zoom	 Zoom / Size
 CHP.Add	 Green / APP / Repeat
 Rec	 Rec / Rec Mode
 Rec Mode	 Shift + Rec / Rec Mode
 Title	 Sound / Title
 Thumbnail	 Picture / Format
 Play Mode	 Shift + Play /
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search

Original	Replacement
 Clear	 Exit / Cancel / Clear
 TV/VCR	 TV/Radio /
 *(Left)	 Guide / EPG / -/-
 *(Right)	 Shift + Guide / EPG / -/-
 ShowView	 Setup / OPT /

