
 

 



 


 



 

 



 

 





 























 



 



 
 
 
 
 
 
 
 





 


 


 





 







Original	Replacement	Original	Replacement
 Power	 Power	 16:9	16:9
 Sleep	 Sleep	 Lang	Lang
 Mute	 Mute	 RCL	RCL
 Timer	 AV	 FAV	FAV
 EPI	 Guide	 Page+ / Timeshift	Shift + Ch +
 SUBTL	 Subt	 Page- / V-Format	Shift + Ch -
 Audio	 Shift + Dual	 Page- / V-Format	Shift + Format
 1	 1	 Up / CH+	Up
 2	 2	 Up / CH+	Ch +
 3	 3	 Down / CH-	Down
 4	 4	 Down / CH-	Ch -
 5	 5	 Right / Vol+	Right
 6	 6	 Right / Vol+	Vol +
 7	 7	 Left / Vol-	Left
 8	 8	 Left / Vol-	Vol -
 9	 9	 OK	Ok
 0	 0	 Menu	Menu

Original	Replacement	Original	Replacement
 Format	 Format	 TV	DVD
 Dual	 Dual	 DVD	SAT
 Back	 Back	 SAT	AUX
 Pre Ch	 Pre Ch	 AUX	REC MODE
 Shift + Ch +	 Shift + Ch +	 PLAY MODE	PLAY MODE
 Shift + Ch -	 Shift + Ch -	 STOP	STOP
 Shift + Format	 Shift + Format	 DISC NAV	DISC NAV
 Up	 Up	 SOUND	SOUND
 Ch +	 Ch +	 AD	AD
 Down	 Down	 SETTINGS	SETTINGS
 Ch -	 Ch -	 LIST	LIST
 Right	 Right	 DUAL	DUAL
 Vol +	 Vol +	 SUBT	SUBT
 Vol +	 Vol +	 OPT	OPT
 Left	 Left	 PROG	PROG
 Vol -	 Vol -	 SEARCH	SEARCH
 Vol -	 Vol -	 PICTURE	PICTURE
 Ok	 Ok	 ECO	ECO
 Menu	 Menu	 SLEEP	SLEEP
 Menu	 Menu	 TV/R	TV/R
 Menu	 Menu	 FORMAT	FORMAT
 Menu	 Menu	 3D	3D
 Menu	 Menu	 E-MANUAL	E-MANUAL
 Menu	 Menu	 REPEAT	REPEAT
 Menu	 Menu	 ZOOM	ZOOM
 Menu	 Menu	 TIMER	TIMER
 Menu	 Menu	 D.MENU	D.MENU
 Menu	 Menu	 TEXT	TEXT
 Menu	 Menu	 TOP MENU	TOP MENU
 Menu	 Menu	 AV	AV



