

















 

 

 





 








 



 
 



 







 







 









Original	Replacement	Original	Replacement
 Power	 Power	 I<<	 I<< / Preset-
 Control	 Setup / OPT /	 Stop	 Stop / Hold
 [i+]	 Info / Angle	 >>I	 >>I / Preset+
 P.Info	 Smart / List	 1	 1
 ATV	 Shift + Smart / List	 2	 2
 DTV	 Shift + Display / Media	 3	 3
 SAT	 Shift + 0	 4	 4
 Radio	 TV/Radio /	 5	 5
 Power Ext. Media	 Shift + Power	 6	 6
 ←	 Shift + Left	 7	 7
 Pause	 Pause / Step / Freeze	 8	 8
 →	 Shift + Right	 9	 9
 Rec	 Rec / Rec Mode	 Recall	 Fav / Marker / PC
 <<	 << / Tune-	 0	 0
 Play	 Play / Slow	 Source	 AV / Input / RDS
 >>	 >> / Tune+	 I/II/I+II/▼/O	 Audio / Lang I/II
 Rec Stop	 Shift + Stop / Hold	 [<>]	 Picture / Format





Original	Replacement
AV MODE	SHIFT + RDS AV INPUT / Shift + AV / Input / RDS
Eco	MEDIA DISPLAY / Display / Media
Mute	DIMMER MUTE / Mute / Dimmer
Vol+	VOL + / Vol+
P+	CH PAGE + / CH+ / Page+
[≡]	GOTO TEXT / Text / Goto
Vol-	VOL - / Vol-
P-	CH PAGE - / CH- / Page-
Home	HOME MENU / Menu / Home
EPG	GUIDE EPG / Guide / EPG / -/--
Nothing	SURROUND / Eject / Surround
Up	Up
Left	Left
OK	OK
Right	Right
End	CLEAR EXIT / Exit / Cancel / Clear
Down	Down

Original	Replacement
Back	RETURN / Back / Return
[...]	EQ SUBTITLE / Subtitle / EQ
[≡?]	TOP MENU D.MENU / D.Menu / Top
[≡o]	TIMER SLEEP / Sleep / Timer
[≡♦]	SIZE ZOOM / Zoom / Size
Red	NETFLIX SEARCH / Red / Netflix / Search
Green	APP REPEAT / Green / APP / Repeat
Yellow	YouTube REPEAT A-B / Yellow / YouTube / Repeat
Blue	Prime Video RANDOM / Blue / Prime Video / Random

