



Original	Replacement	Original	Replacement
Power	Power	CH+	Ch +
1	1	CH-	Ch -
2	2	Vol+	Vol +
3	3	Vol-	Vol -
4	4	I<< Skip	I<<
5	5	Skip >>I	>>I
6	6	<< Slow/Search	<<
7	7	Slow/Search >>	>>
8	8	Pause	Pause
9	9	Stop	Stop
0	0	Play	Play
-/--	Guide	Menu/Play List	Menu
Cancel	Exit	Top Menu / Direct Navigator	D. Menu
AV	AV	Functions	Options
Input Select	Media	Return	Back
Direct Tv Rec	TV/R	Up	Up
ShowView	3D	Down	Down



