



Original	Replacement
Open / Close	Eject / Surround
Power	Power
CD / DVD	Shift + 3
CD / DVD	Shift + 2
Band	Smart / List
Band	Shift + 6
AUX	Shift + 7
Mute	Mute / Dimmer
Dimmer	Shift + Mute / Dimmer
Sleep	Sleep / Timer
1	1
2	2
3	3
RDS	AV / Input / RDS
4	4
5	5
6	6

Original	Replacement
PTY	Shift + Smart / List
7	7
8	8
9	9
PTY Search	Shift + Display / Media
Repeat	Green / APP / Repeat
0	0
Repeat A-B	Yellow / YouTube / Repeat
Program	TV/Radio /
Clear	Exit / Cancel / Clear
Sound Mode	Sound / Title
Preset+	Shift + >> / Preset+
Preset+	CH+ / Page+
Audio	Audio / Lang I/II
Volume+	Vol+
Preset-	Shift + I<< / Preset-
Preset-	CH- / Page-





Original	Replacement	Original	Replacement
Subtitle	Subtitle / EQ	I<< / Skip Scan-	I<< / Preset-
Volume-	Vol-	>>I / Skip Scan+	>>I / Preset+
Zoom	Zoom / Size	Title	Shift + Sound / Title
Return	Back / Return	Marker	Fav / Marker / PC
Up	Up	Search	Red / Netflix / Search
Left	Left	Angle	Info / Angle
Enter	OK		
Right	Right		
Menu	Menu / Home		
Down	Down		
Display	Display / Media		
Setup	Setup / OPT /		
Stop	Stop / Hold		
Pause / Step	Pause / Step / Freeze		
Play	Play / Slow		
<< / Slow Scan-	<< / Tune-		
>> / Slow	>> / Tune+		

Original	Replacement
I<< / Skip Scan-	I<< / Preset-
>>I / Skip Scan+	>>I / Preset+
Title	Shift + Sound / Title
Marker	Fav / Marker / PC
Search	Red / Netflix / Search
Angle	Info / Angle

