






 






 



 


 

























 
 
 

 

 

 



 




 







Original	Replacement	Original	Replacement
	Power		Power
	Sleep / Timer		Sleep
	Sleep / Timer		Shift + AV
	Display		Info
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P↔P		Back
	P↔P		Pre Ch
	Menu		Menu
	Up / P+		Up
	Up / P+		Ch +
	Down / P-		Down
	Down / P-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	Enter		Ok
	Input Select		AV
	Text / Mix		Text
	Normal		Smart
	Skip		Media
	Audio 1/2		Dual
	Status		D. Menu
	Red		Red





Original		Replacement		Original		Replacement	
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Picture Size		Eject				

