



Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Net+	 Shift + Up
 DTV	 D.Menu / Top
 USB	 Shift + 8
 YouTube	 Shift + Yellow / YouTube / REPEAT A-B
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Tv Guide	 Guide / EPG / -/--
 0	 0

Original	Replacement
 Recall	 Shift + Back / Return
 Vol+	 Vol+
 Picture	 Picture / Format
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Sound	 Sound / Title
 CH-	 CH- / Page-
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 FAV	 Fav / Marker / PC





Original	Replacement
	Info / Angle
	Sleep / Timer
	Audio / Lang I/II
	Subtitle / EQ
	Text / Goto
	Shift + Text /
	Zoom / Size
	Shift + Power
	Rec / Rec Mode
	I<< / Preset-
	>>I / Preset+
	Stop / Hold
	Shift + Rec / Rec Mode
	<< / Tune-
	>> / Tune+
	Play / Slow
	Pause / Step / Freeze

Original	Replacement
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random

