



Original	Replacement	Original	Replacement
	Power		Power
	Smart		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Info		Info / Angle
	0		0
	Guide		Guide / EPG / -/--
	Netflix		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	Google Play		Display / Media

Original	Replacement	Original	Replacement
	prime video		Shift + Blue / Prime
	Home		Shift + Menu /
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	Source		AV / Input / RDS
	CH-		CH- / Page-
	Red		Red / Netflix / Search





	Original	Replacement	Original	Replacement
	 Green	 Green / APP / Repeat		
	 Yellow	 Yellow / YouTube / Repeat		
	 Blue	 Blue / Prime Video / Random		
	 <<	 << / Tune-		
	 Play	 Play / Slow		
	 >>	 >> / Tune+		
	 Rec	 Rec / Rec Mode		
	 Pause	 Pause / Step / Freeze		
	 Stop	 Stop / Hold		
	 Text	 Text / Goto		
	 Subt	 Subtitle / EQ		
	 Audio	 Audio / Lang I/II		

