 
 







Original	Replacement	Original	Replacement
 Power	 Power	 P+	 Ch +
 1	 1	 P-	 Ch -
 2	 2	 Home	 Smart
 3	 3	 [G]	 Guide
 4	 4	 i	 Info
 5	 5	 Back	 Back
 6	 6	 Exit	 Exit
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 Lang	 Dual	 OK	 Ok
 TXT	 Text	 Netflix	 Media
 Vol+	 Vol +	 YouTube	 Shift + Media
 Vol-	 Vol -	 *1	 Format
 Mute	 Mute	 *2	 3D
 Source	 AV	 Red	 Red

Original	Replacement	Original	Replacement
 P+	 Ch +	 TV	 AUX
 P-	 Ch -	 DVD	 REC MODE
 Home	 Smart	 PLAY MODE	 DUAL
 [G]	 Guide	 SOUND	 AD
 i	 Info	 DISC NAV	 SETTINGS
 Back	 Back	 LIST	 SUBT
 Exit	 Exit	 PROG	 OPT
 Up	 Up	 SEARCH	 PICTURE
 Down	 Down	 SLEEP	 ECO
 Right	 Right	 E-MANUAL	 TIMER
 Left	 Left	 D.MENU	 AV
 OK	 Ok	 TOP MENU	 DISPLAY
 Netflix	 Media	 MENU	 INFO
 YouTube	 Shift + Media	 OK	 EXIT
 *1	 Format	 CLEAR	 RETURN
 *2	 3D	 EXIT	 BACK
 Red	 Red	 HOME	 SMART
		 VOL +	 CH -
		 APP	 MEDIA
		 1	 2
		 2	 3
		 3	 4
		 4	 5
		 5	 6
		 6	 7
		 7	 8
		 8	 9
		 9	 0
		 0	 FAV
		 GUIDE	 PRE-CH
		 A	 B
		 B	 C
		 C	 D
		 D	



