





 
 


 

 



 

 

 











 











 











 

Original	Replacement
 Standby	 Power
 Open/Close	 Eject
 Subtitle	 Subt
 Audio	 Dual
 Angle	 3D
 Time	 D. Menu
 Setup	 Options
 Stop	 Stop
 Play	 Play
 Source	 AV
 Record	 Rec
 Pause	 Pause
 FBW	 <<
 FFW	 >>
 Prev	 I<<
 Slow	 Shift + Play
 Next	 >>I

Original	Replacement
 DV	 Smart
 Return	 Back
 ADD/Clear	 Exit
 GOTO	 Pre Ch
 Up	 Up
 Down	 Down
 Edit	 Red
 Left	 Left
 Right	 Right
 Enter	 Ok
 Discfunc	 Guide
 Shuffle	 TV/R
 Program	 Sleep
 Repeat	 Text
 Zoom	 Shift + Eject
 USB	 Media
 Timer	 Shift + AV





Original		Replacement	
	Channel-		Ch -
	Channel+		Ch +
	NTSC/PAL		Format
	Display		Info
	Volume-		Vol -
	Volume+		Vol +
	Title		List
	Menu		Menu
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Original		Replacement	
	9		9
	0		0
	A-B		Shift + Text

