














Original	Replacement
	 Power
	 D.Menu / Top
	 Display / Media
	 Eject / Surround
	 Subtitle / EQ
	 Red / Netflix / Search
	 Info / Angle
	 Audio / Lang I/II
	 Setup / OPT /
	 Sound / Title
	 Menu / Home
	 Zoom / Size
	 Back / Return
	 Up
	 Pause / Step / Freeze
	 Left
	 Play / Slow

Original	Replacement
	 OK
	 Right
	 Shift + Slow Play /
	 Down
	 Stop / Hold
	 I<< / Preset-
	 Next >>I / Preset+
	 << / Tune-
	 >> / Tune+
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Vol-
	 Vol+
	 1
	 2
	 3
	 Mute / Dimmer



