






















 



 
 
 








 





 



 

 

 



 

 

 













 





 

Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Home	 Shift +  Home / Menu /
 0	 0
 YouTube	 Shift +  YouTube / Shift + Yellow / YouTube /
 Vol+	 Vol+
 TV	 TV/Radio /
 CH+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
 Source	 RDS AV / Input / RDS
 CH-	 CH- / Page-
 USB	 Shift +  8
 Option	 OPT-TOOLS SETUP / OPT /
 Info	 ANGLE INFO / Info / Angle
 FAV	 PC FAV MARKER / Fav / Marker / PC
 Menu	 HOME MENU / Menu / Home
 EPG	 GUIDE EPG / Guide / EPG / -/--
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 RETURN BACK / Back / Return
 Exit	 CLEAR EXIT / Exit / Cancel / Clear
 Netflix	 SHIFT +  Red / Netflix / Search





Original	Replacement
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer
 Zoom-	 Shift + Zoom /
 Zoom+	 Zoom / Size
 List	 Smart / List
 Text	 Text / Goto
 Sub	 Subtitle / EQ
 Recall	 Shift + Back / Return
 Eco	 Display / Media
 <<	 << / Tune-
 >>	 >> / Tune+
 I<	 I<< / Preset-
 >I	 >>I / Preset+
 Rec	 Rec / Rec Mode

Original	Replacement
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Audio	 Audio / Lang I/II

