
 
 




 


 
 





 

 
 




 

 

 


 


 


Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Menu Down	 Down
Stop	 Stop	Return	 Back
Slow Up	 Ch +	Volume+	 Vol +
Pause	 Pause	Progr.	 Sleep
Auto/Track	 List	Next	 >>
Subt.	 Subt	Volume-	 Vol -
Rep/A-B	 +  Shift + Text	Top Menu	 +  Shift + Menu
Title	 D. Menu	1	 1
Repeat/1/All	 Text	Prev.	 <<
Zoom	 Eject	2	 2
DVD/TV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
8	 8		
9	 9		
+10	 Guide		
0	 0		
C/CH	 Pre Ch		
Np	 +  Shift + Subt		
Pbc	 3D		
Video	 +  Shift + D. Menu		
R/L	 +  Shift + Info		
Record	 Rec		
Play	 Play		
Angle	 Format		
Rewind	 <<		
Setup	 Options		
F.Forward	 >>		

