 






 




 


 





 













 










 

 
 
















Original	Replacement	Original	Replacement
 Power Receiver	 Power	 Mute	 Mute / Dimmer
 BD	 1	 Top Menu	 D.Menu / Top
 DVD	 2	 Band	 Subtitle / EQ
 DVR / BDR	 5	 Audio	 Audio / Lang I/II
 HDMI	 0	 Tune+	 Shift + >> /
 TV	 TV/Radio /	 Up	 Up
 CD	 3	 Tools	 Setup / OPT /
 NET	 7	 T.Edit	 Text / Goto
 ADAPTER	 Eject / Surround	 Video	 Picture / Format
 iPod USB	 8	 Left	 Left
 Tuner	 6	 Preset -	 Shift + I<< / Preset-
 Video	 4	 Enter	 OK
 CD-R	 9	 Preset +	 Shift + >>I / Preset+
 Input Select	 Shift + Left	 Right	 Right
 Input Select ~	 Shift + Right	 iPod CTRL	 Smart / List
 Master Volume	 Vol+	 Home Menu	 Menu / Home
 Master Volume	 Vol-	 Tune-	 Shift + << /

Original	Replacement	Original	Replacement
 Mute	 Mute / Dimmer	 Mute	 Mute / Dimmer
 Top Menu	 D.Menu / Top	 Band	 Subtitle / EQ
 Audio	 Audio / Lang I/II	 Tune+	 Shift + >> /
 Up	 Up	 Tools	 Setup / OPT /
 T.Edit	 Text / Goto	 Video	 Picture / Format
 Left	 Left	 Preset -	 Shift + I<< / Preset-
 Enter	 OK	 Preset +	 Shift + >>I / Preset+
 Right	 Right	 iPod CTRL	 Smart / List
 Home Menu	 Menu / Home	 Tune-	 Shift + << /





Original		Replacement		Original		Replacement	
	Down		Down		Stop		Stop / Hold
	Return		Back / Return		>>		>> / Preset+
	Auto / Alc / Direct		Info / Angle		1 Tuner		Shift + 1
	Stereo		Sound / Title		2 Tuner		Shift + 2
	Repeat		Green / APP / Repeat		3 Tuner		Shift + 3
	Standard		Shift + Smart / List		Audio DVD		Shift + Audio / Lang I/II
	Random		Blue / Prime Video / Random		4 Tuner		Shift + 4
	Adv. Surr.		Guide / EPG / -/-		Signal Sel		Shift + Setup / OPT / Tools
	<<		<< / Tune-		MCACC		Fav / Marker / PC
	Phase CTRL		Red / Netflix / Search		5 Tuner		Shift + 5
	Play		Play / Slow		6 Tuner		Shift + 6
	>>		>> / Tune+		Sleep		Sleep / Timer
	Status		Exit / Cancel / Clear		Disp		Display / Media
	I<<		I<< / Preset-		7 Tuner		Shift + 7
	Pause		Pause / Step / Freeze		CH Level		Shift + CH+ /
	MPX		Zoom / Size		8 Tuner		Shift + 8
	PQLS		Shift + Menu / Home		A.ATT.		Yellow / YouTube / Repeat







 





















 

 



 

 







 





 

 

 





Original	Replacement
9 Tuner	Shift + 9
Dimmer	Shift + Mute / Dimmer
CH +	CH+ / Page+
D.Access	Shift + D.Menu / Top Menu
0 Tuner	Shift + 0
Class	Shift + Display / Media
Enter (Class)	Shift + OK
CH -	CH- / Page-

Original	Replacement





 

















 











 

 



 

 


 
 



 

 















Original		Replacement		Original		Replacement	
	Power Source		Power		1		1
	DVD		Shift + 2		2		2
	Top Menu		D.Menu / Top		3		3
	Up		Up		Audio		Audio / Lang I/II
	Left		Left		4		4
	Enter		Shift + OK		5		5
	Enter		OK		6		6
	Right		Right		7		7
	Down		Down		8		8
	Return		Back / Return		9		9
	<<		<< / Tune-		0		0
	Play		Play / Slow		Menu		Menu / Home
	>>		>> / Tune+				
	I<<		I<< / Preset-				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	>>I		>>I / Preset+				





Original	Replacement	Original	Replacement
 Power Source	 Power	 1	 1
 Tuner	 Shift + 6	 2	 2
 Master Volume	 Vol+	 3	 3
 Master Volume	 Vol-	 4	 4
 Mute	 Mute / Dimmer	 5	 5
 Band	 Subtitle / EQ	 6	 6
 Tune+	 >> / Tune+	 Disp	 Display / Media
 Tune+	 Up	 7	 7
 T.Edit	 Text / Goto	 8	 8
 Preset+	 >> / Preset+	 9	 9
 Preset-	 Left	 D.Access	 D.Menu / Top
 Enter	 OK	 0	 0
 Preset-	 << / Preset-	 Class	 Shift + Display / Media
 Preset+	 Right	 Menu	 Menu / Home
 Tune-	 << / Tune-	 Search	 Red / Netflix / Search
 Tune-	 Down		
 MPX	 Zoom / Size		

