

 




 



 

 


 
 



 

 
 
 




 




 
 





 
 








 


 
 

 




 



 





 
 
 


 

 
 

 
 

 



 
 





Original	Replacement	Original	Replacement
PWR On/Off	 Power	8tuv	 8
Mute	 Mute	9wxyz	 9
Opt?	 Options	Guide Pilote	 Guide
TV/SAT	 AV	0/10	 0
Menu	 Menu	FAV Pref.	 Pre Ch
Menu Up	 Up	Green	 Green
Menu Down	 Down	Yellow	 Yellow
CH/Page+	 Ch +	Blue	 Blue
Audio	 Dual	Dev	 D. Menu
CH/Page-	 Ch -	Store	 Sleep
1. ?	 1	50j17	 List
2abc	 2	H/V Play	 Play
3def	 3		
4ghi	 4		
5jkl	 5		
6mno	 6		
7pqrm	 7		



Original	Replacement	Original	Replacement
PWR On/Off	 Power	3def	 3
Mute	 Mute	4ghi	 4
TV	 TV/R	5jkl	 5
Menu	 Menu	6mno	 6
Menu Up	 Up	7pqrm	 7
Menu Left	 Left	8tuv	 8
OK Enter	 Ok	9wxyz	 9
Menu Right	 Right	0/10	 0
Exit	 Exit	FAV Pref.	 Pre Ch
Menu Down	 Down	West	 I<<
Volume+	 Vol +	Dev	 >>
CH/Page+	 Ch +	Dec/Pause	 Pause
Volume-	 Vol -	Freeze	 Stop
Audio	 Dual	H/V Play	 Play
CH/Page-	 Ch -	Lang./Rewind	 <<
1. ?	 1	East	 >>I
2abc	 2		



Original	Replacement	Original	Replacement
PWR On/Off	 Power	1. ?	 1
Mute	 Mute	2abc	 2
Info	 +  Shift + Info	3def	 3
TV	 TV/R	4ghi	 4
TV/SAT	 AV	5jkl	 5
Menu	 Menu	6mno	 6
Menu Up	 Up	7pqrm	 7
Display	 Info	8tuv	 8
Menu Left	 Left	9wxyz	 9
OK Enter	 Ok	Guide Pilote	 Guide
Menu Right	 Right	0/10	 0
Menu Down	 Down	FAV Pref.	 Pre Ch
Volume+	 Vol +	Scan/Setup	 Options
CH/Page+	 Ch +	Radio	 +  Shift + TV/R
Volume-	 Vol -		
Audio	 Dual		
CH/Page-	 Ch -		

