






 
 

 








 

 
 


 


 

 




 


 

 




	Original	Replacement		Original	Replacement
	Power		Power		Tv Display
	Mute		Mute		Info
	1		1		Up
	2		2		Down
	3		3		Right
	4		4		Left
	5		5		Enter
	6		6		Ok
	7		7		Vol +
	8		8		Vol -
	9		9		S.M.
	0		0		P.M.
	.		Shift + Guide		Smart
	Recall		Back		Media
	Menu		Menu		Ch +
	Source		AV		Ch -
	Exit		Exit		EPG Page Up
					EPG Page Down
					Sleep
					P.G.
					Aspect
					Sleep
					Format
					3D





Original	Replacement	Original	Replacement
 CH List	 List		
 EPG	 Guide		
 FAV	 Pre Ch		
 DTV Strenght	 D. Menu		
 TV	 TV/R		
 AV	 Eject		
 HDMI	 Text		
 YPbPr	 Shift + Format		
 CC	 Subt		
 MTS/SAP	 Dual		
 VGA	 Options		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

