











 














 







 






Original	Replacement	Original	Replacement
 Power	 Power	 Pause/Step	 Pause
 Open/Close	 Eject	 I<<	 I<<
 Function	 AV	 <<	 <<
 Subtitle	 Subt	 >>	 >>
 Sleep	 Sleep	 >>I	 >>I
 Info/Menu	 Info	 Speaker Level	 TV/R
 Home	 Smart	 Sound Effect	 Shift + Dual
 Disc Menu	 D. Menu	 Optical	 Options
 Back	 Back	 Vol+	 Vol +
 Title/Popup	 Menu	 Vol-	 Vol -
 Up/Presets+	 Up	 Mute	 Mute
 Down/Presets-	 Down	 Red	 Red
 Right/Tuning+	 Right	 Green	 Green
 Left/Tuning-	 Left	 Yellow	 Yellow
 Enter	 Ok	 Blue/Mono/Stereo	 Blue
 Stop	 Stop	 1	 1
 Play	 Play	 2	 2





Original		Replacement		Original		Replacement	
	3		3		Vol+ Tv		Shift + Vol +
	4		4		Vol- Tv		Shift + Vol -
	5		5		Mute Tv		Shift + Mute
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Clear		Exit				
	Repeat		Text				
	Audio		Dual				
	Rec		Rec				
	*1		Format				
	Power Tv		Shift + Power				
	AV Input Tv		Shift + AV				
	PR/CH+ Tv		Ch +				
	PR/CH- Tv		Ch -				

